

Installation Guide for 2014-19 Lexus GX 460 Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2014-19 Lexus GX 460

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove the front bumper bolts
- **STEP 3.** Unplug the wirings and the washer spray nozzles
- **STEP 4.** Remove the front bumper
- **STEP 5.** Remove headlight bolts
- **STEP 6.** Remove the headlights

PART II INSTALL HEADLIGHTS


- **STEP 1.** Install ALPHAREX headlights
- **STEP 2.** Plug the wirings and the washer spray nozzles
- **STEP 3.** Plug the turn signal socket
- **STEP 4.** Test the headlight functions
- **STEP 5.** Adjust headlight level
- **STEP 6.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION




Metal
Panel
Popper



Flat
Screwdriver



Phillips
Screwdriver

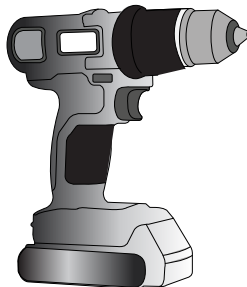

Power Tool



1/4 Ratchet



1/4 Extension

10mm



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.


STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.



STEP 2. REMOVE THE FRONT BUMPER BOLTS


Remove the clips that secure the top plastic cover.

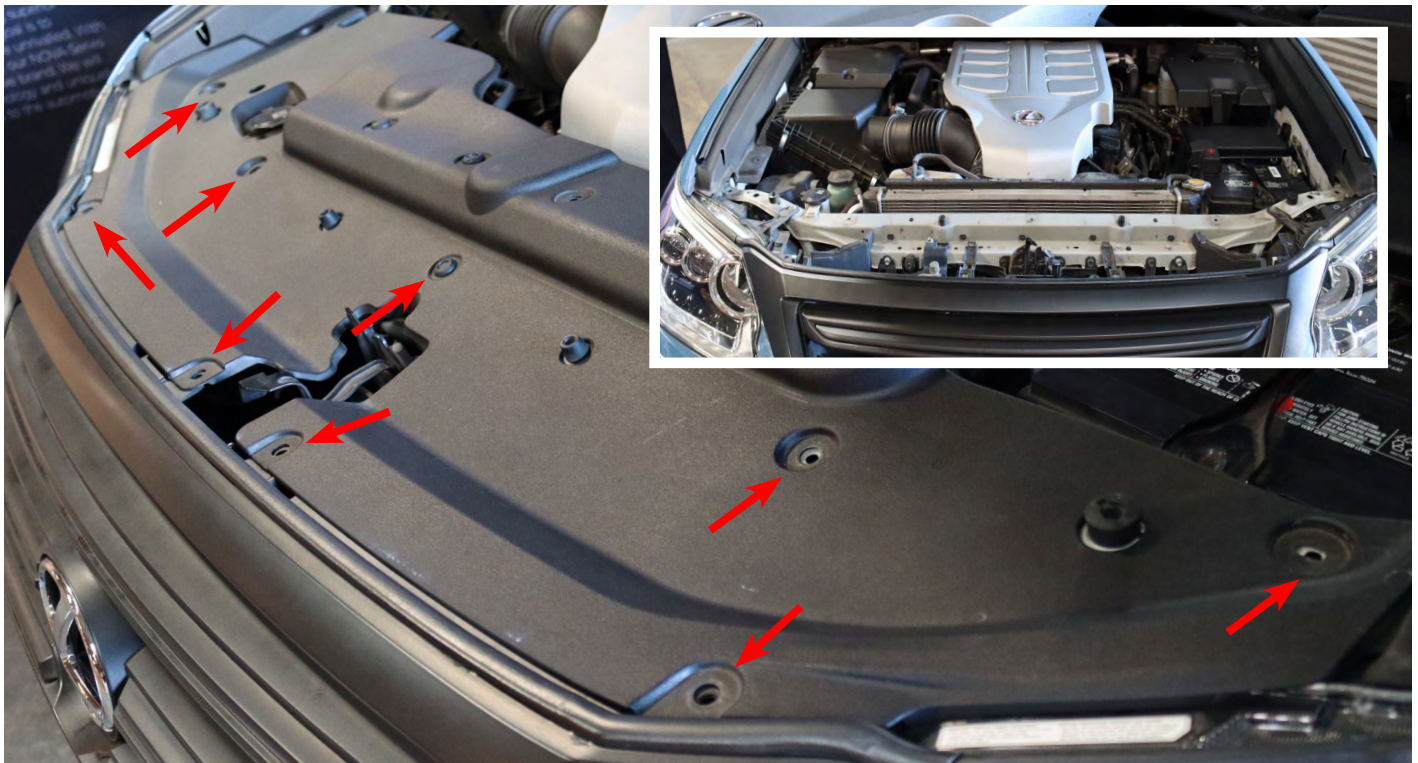


Remove the two 10mm bolts from each side of the wheel well.



Remove the bolts securing both the front grille and the front bumper.

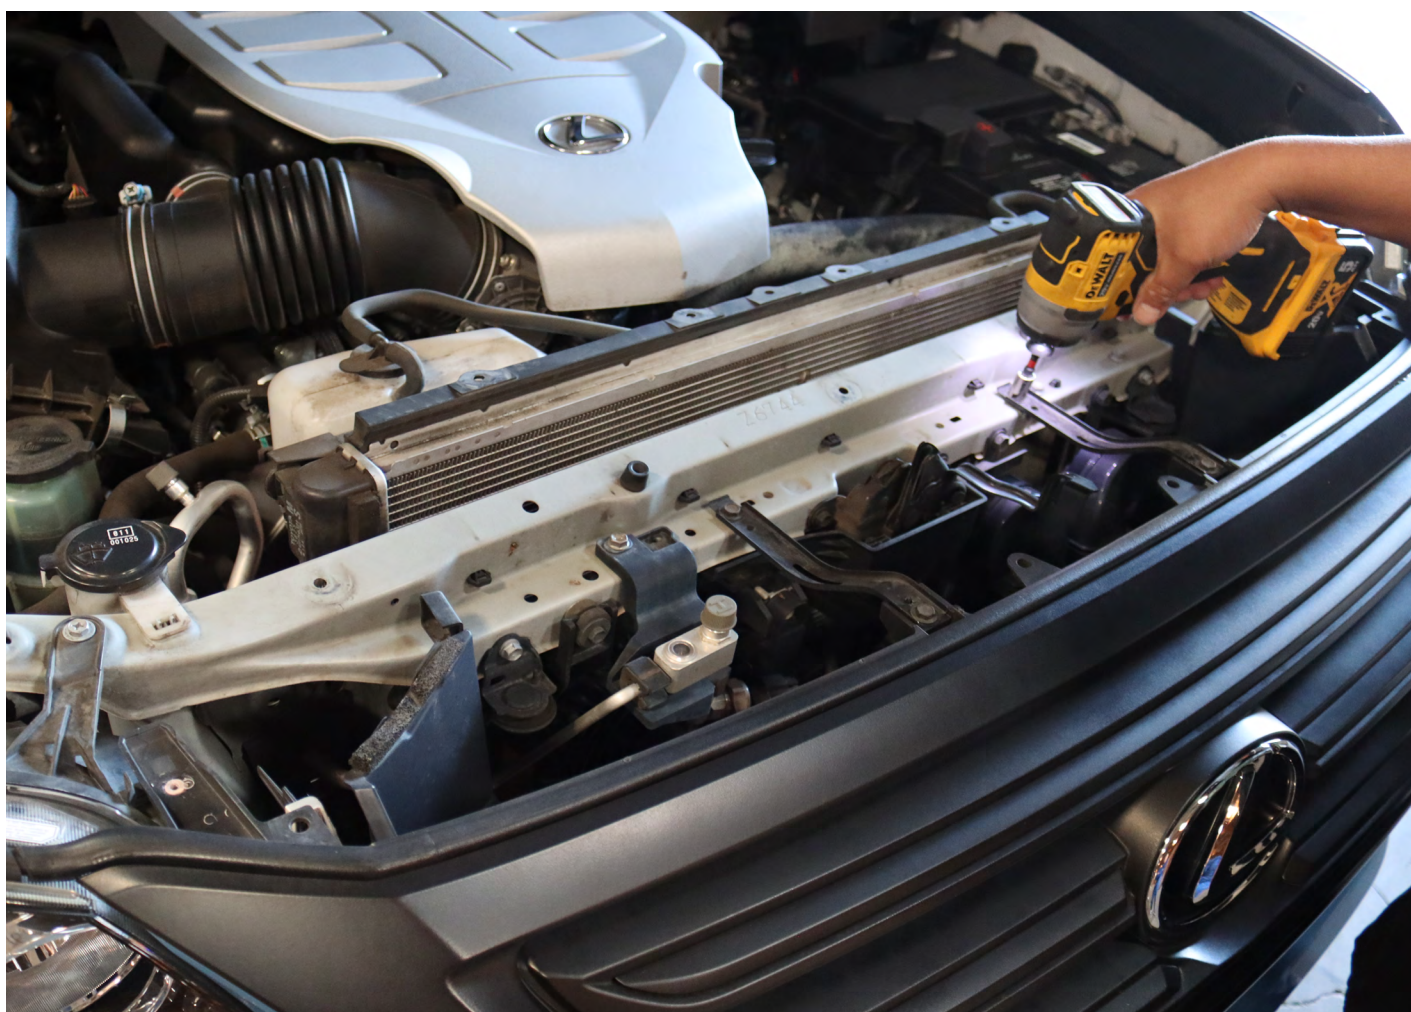




Gently lift each side of the bumper to release it, then pull it forward towards you to remove the front bumper.

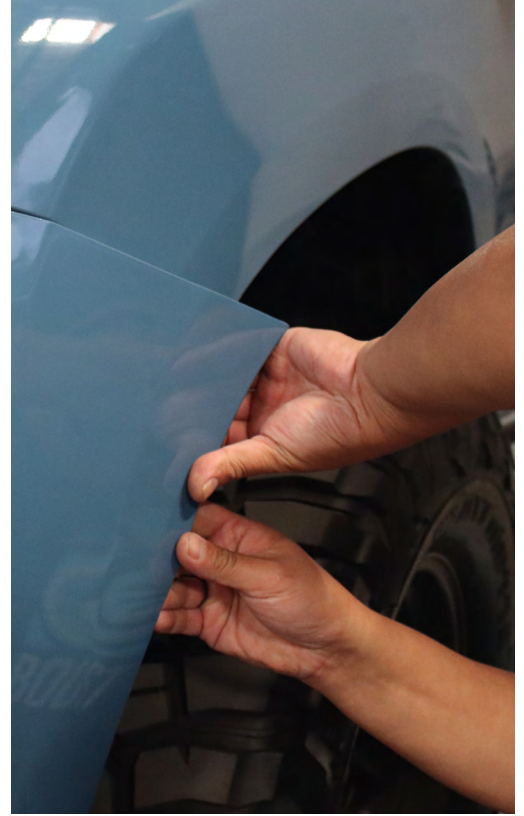

STEP 3. UNPLUG THE WIRINGS AND THE WASHER SPRAY NOZZLES



Before removing the bumper, ensure that the turn signal sockets, washer spray nozzles, and the fog light wirings are unplugged.

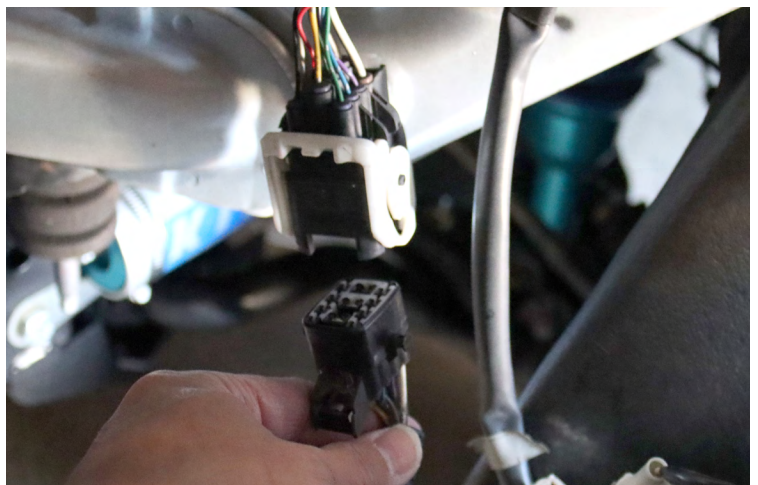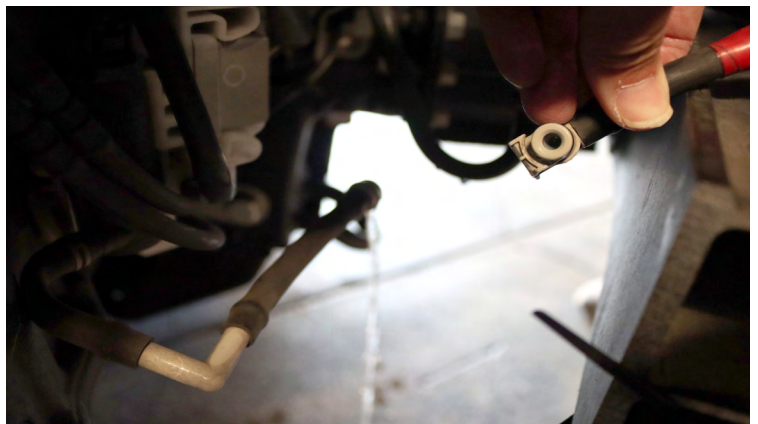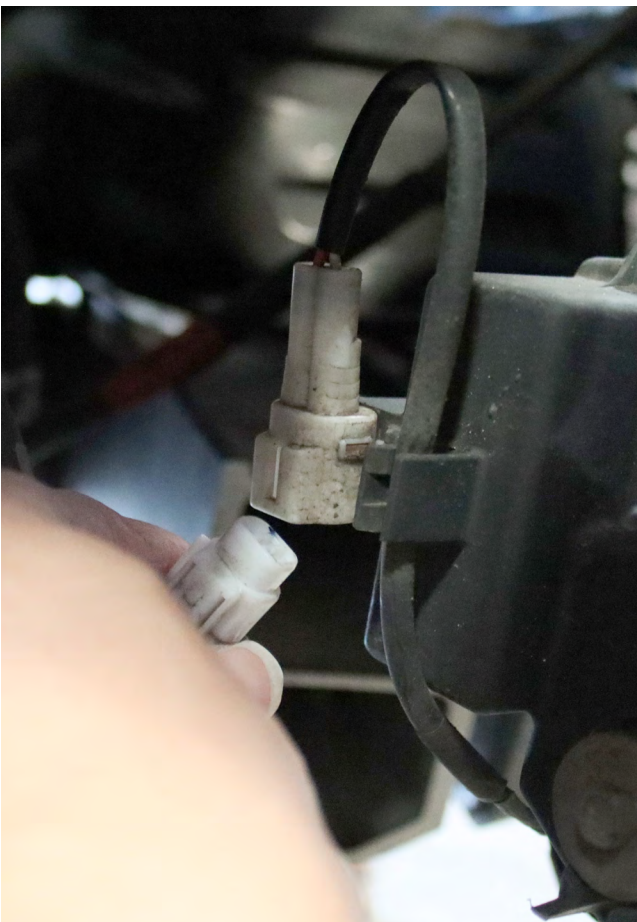

STEP 4. REMOVE THE FRONT BUMPER

After unplugging the wirings and nozzles, you can proceed to remove the bumper completely and set it aside for later reinstallation.




STEP 5. REMOVE HEADLIGHT BOLTS

Remove the two 10mm bolts located on top of the headlight.



Use an extension to remove the single 10mm bolt from the side of the headlight.

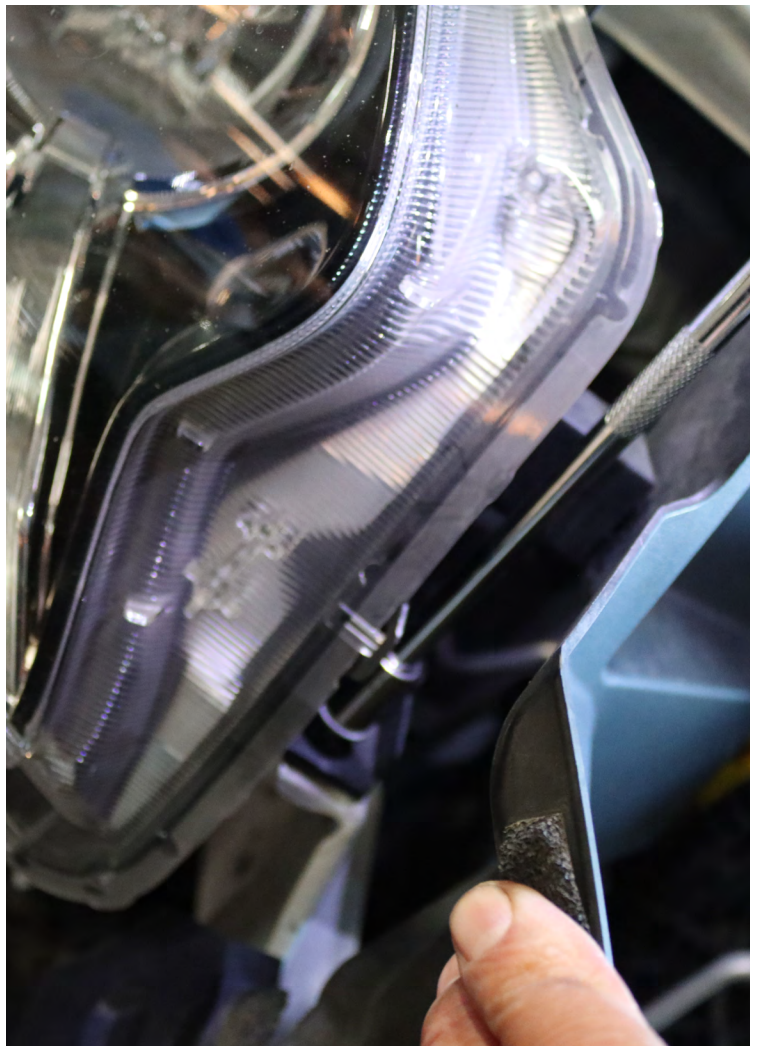


Remove the single 10mm bolt from the side of the headlight, located by the fender and bumper mount bracket.




STEP 6. REMOVE THE HEADLIGHTS

After removing the headlight bolts, gently pull the headlight outward to release it.

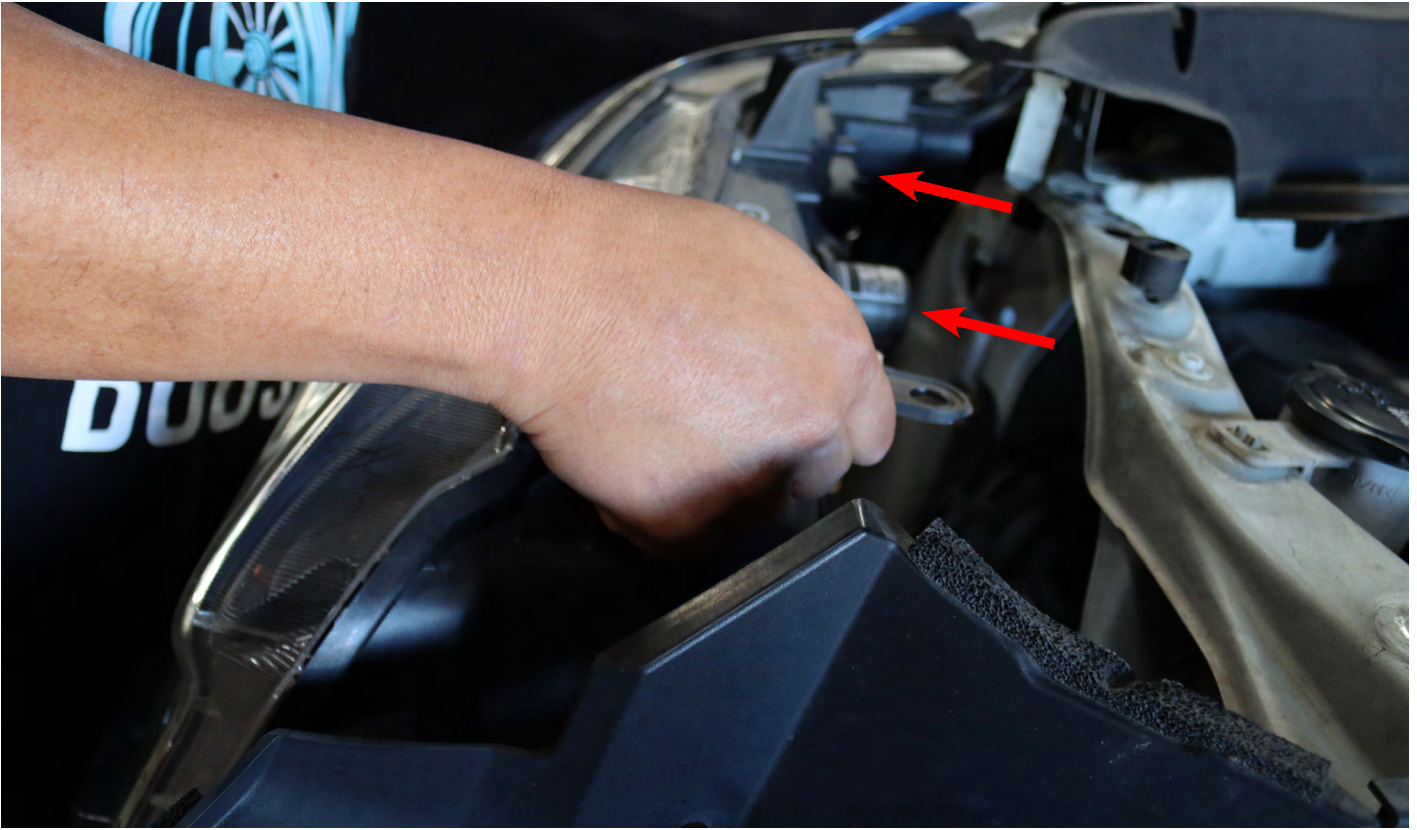

Unplug the wirings and remove the headlight. Repeat the same procedure for the other side of the headlight.

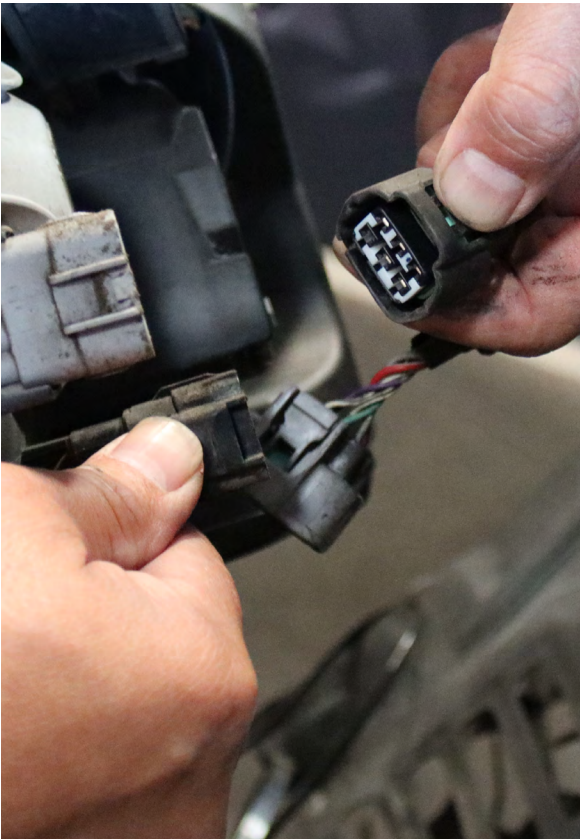


PART II INSTALL HEADLIGHTS

STEP 1. INSTALL ALPHAREX HEADLIGHTS




Connect the light connectors to the new ALPHAREX headlights.

DO NOT USE DIELECTRIC GREASE!

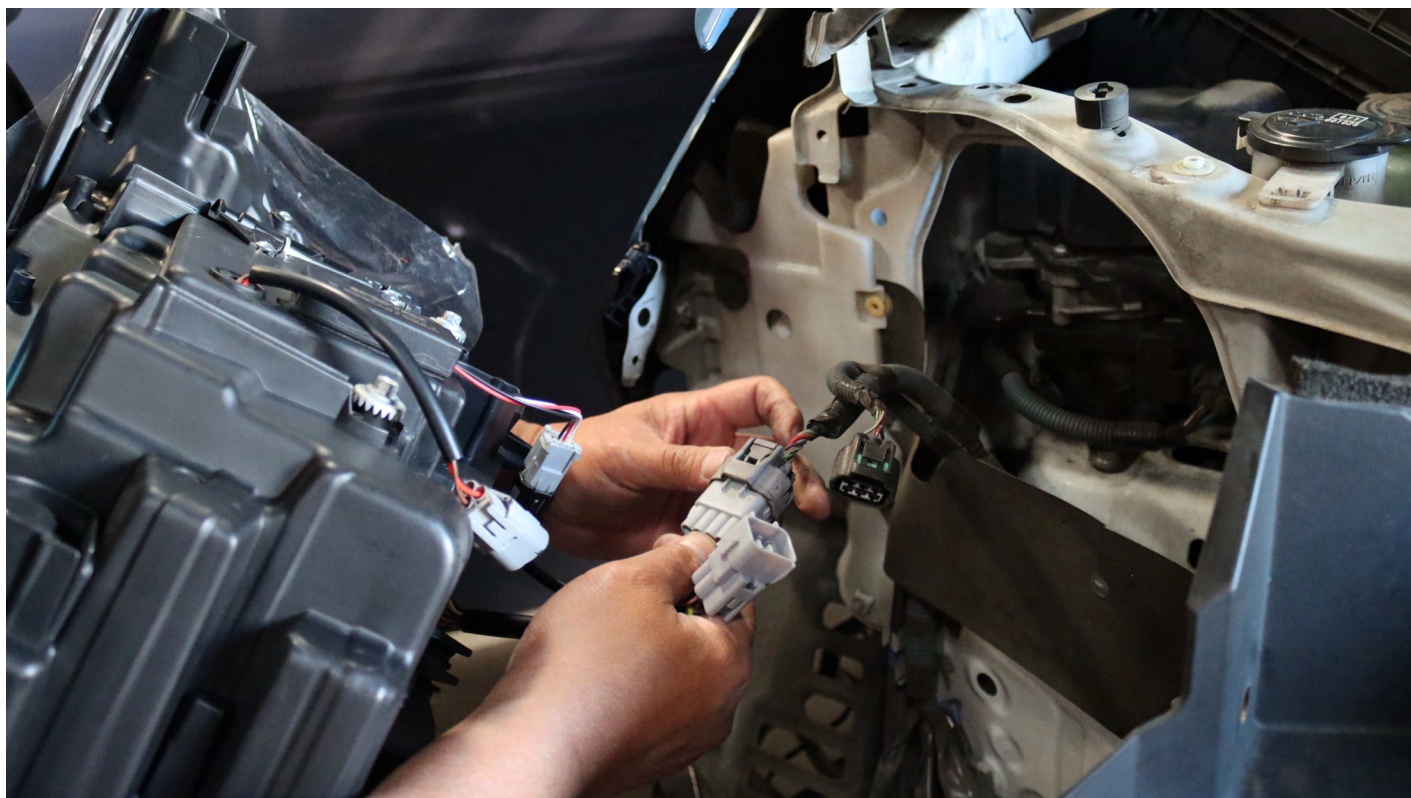

Position the new ALPHAREX headlights onto the vehicle and tighten the bolts.

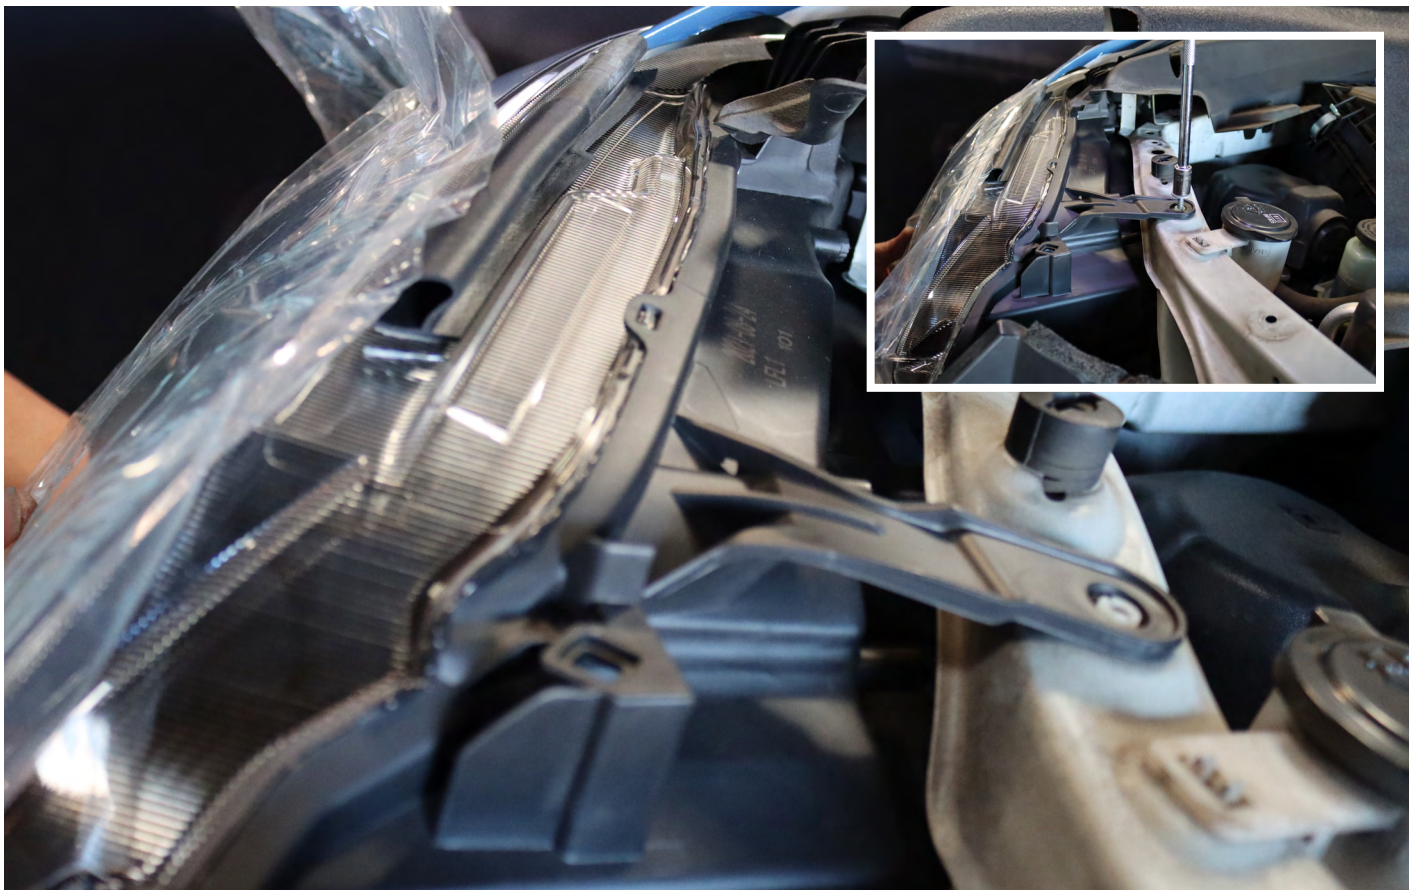


Reinstall the front bumper to proceed to the next step of connecting the wirings.



STEP 2. PLUG THE WIRINGS & THE WASHER SPRAY NOZZLES


After installing the headlights and bumper onto the vehicle, it's time to connect the wirings, the washer spray nozzles, and the attached ALPHAREX headlight's turn signal wiring.

DO NOT USE DIELECTRIC GREASE!

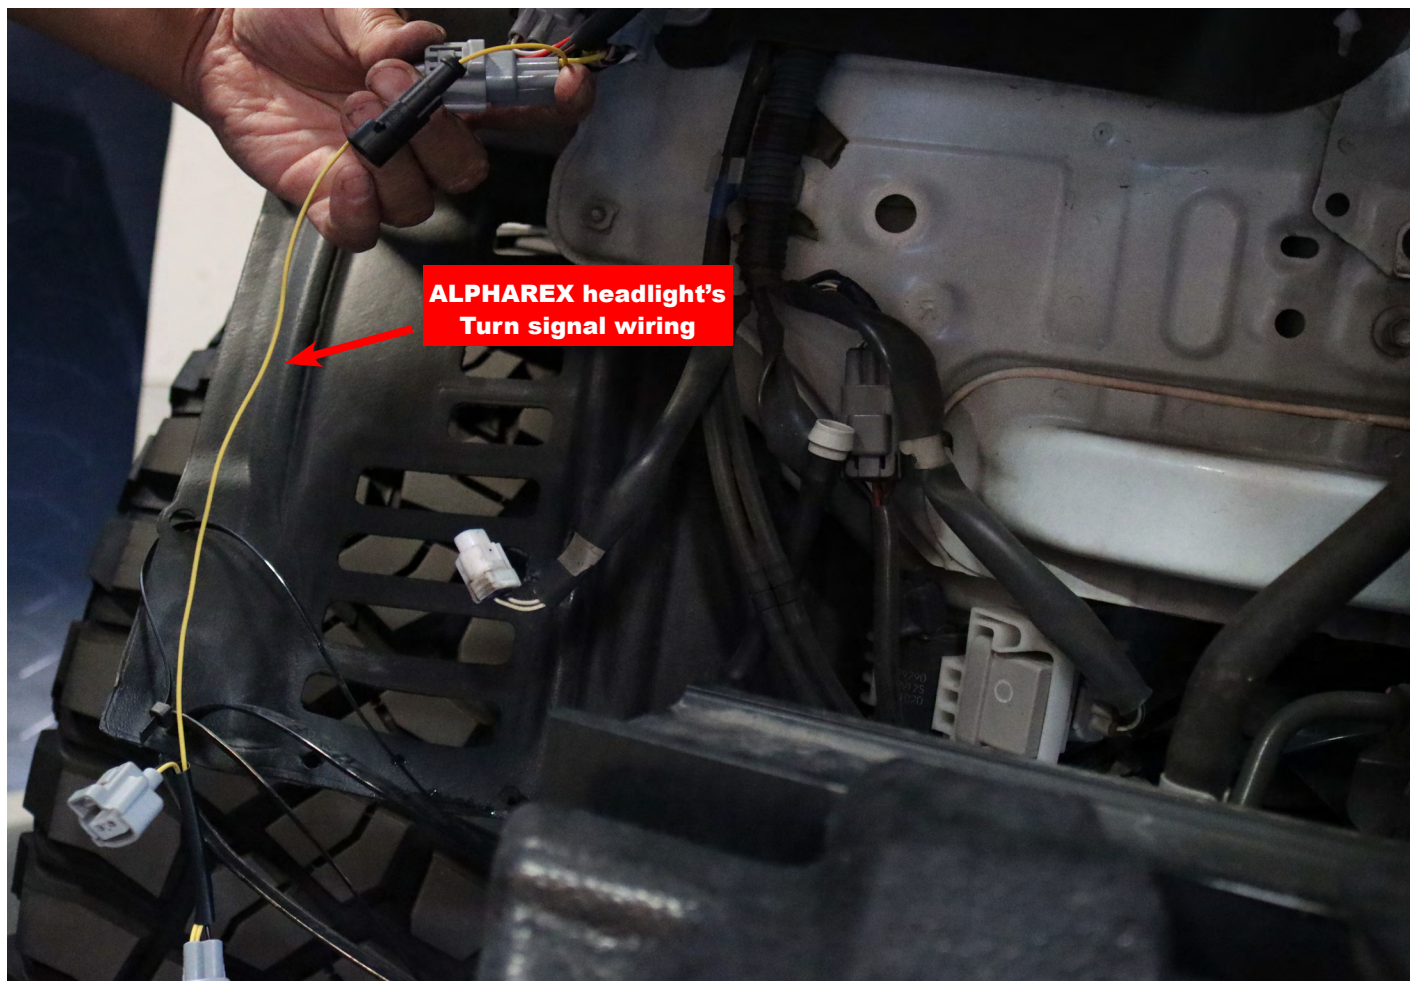

STEP 3. PLUG THE TURN SIGNAL SOCKET

First, connect the ALPHAREX headlight turn signal wiring socket to the vehicle's turn signal lamp. Then plug the other end into the vehicle's turn signal socket. Repeat the same process for the other side of the headlight to complete the installation.

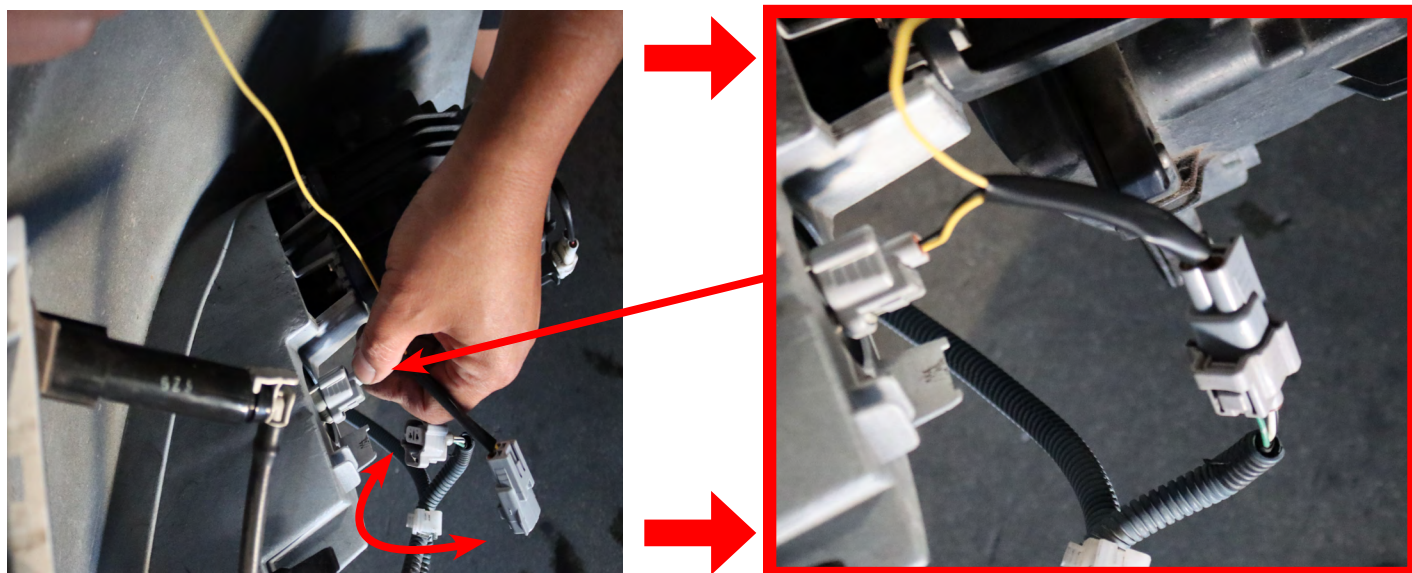

STEP 4. TEST THE HEADLIGHT FUNCTIONS


Test the functions of your ALPHAREX headlights to ensure everything works properly.



STEP 5. ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

Clockwise to lower the level
Counterclockwise to raise the level

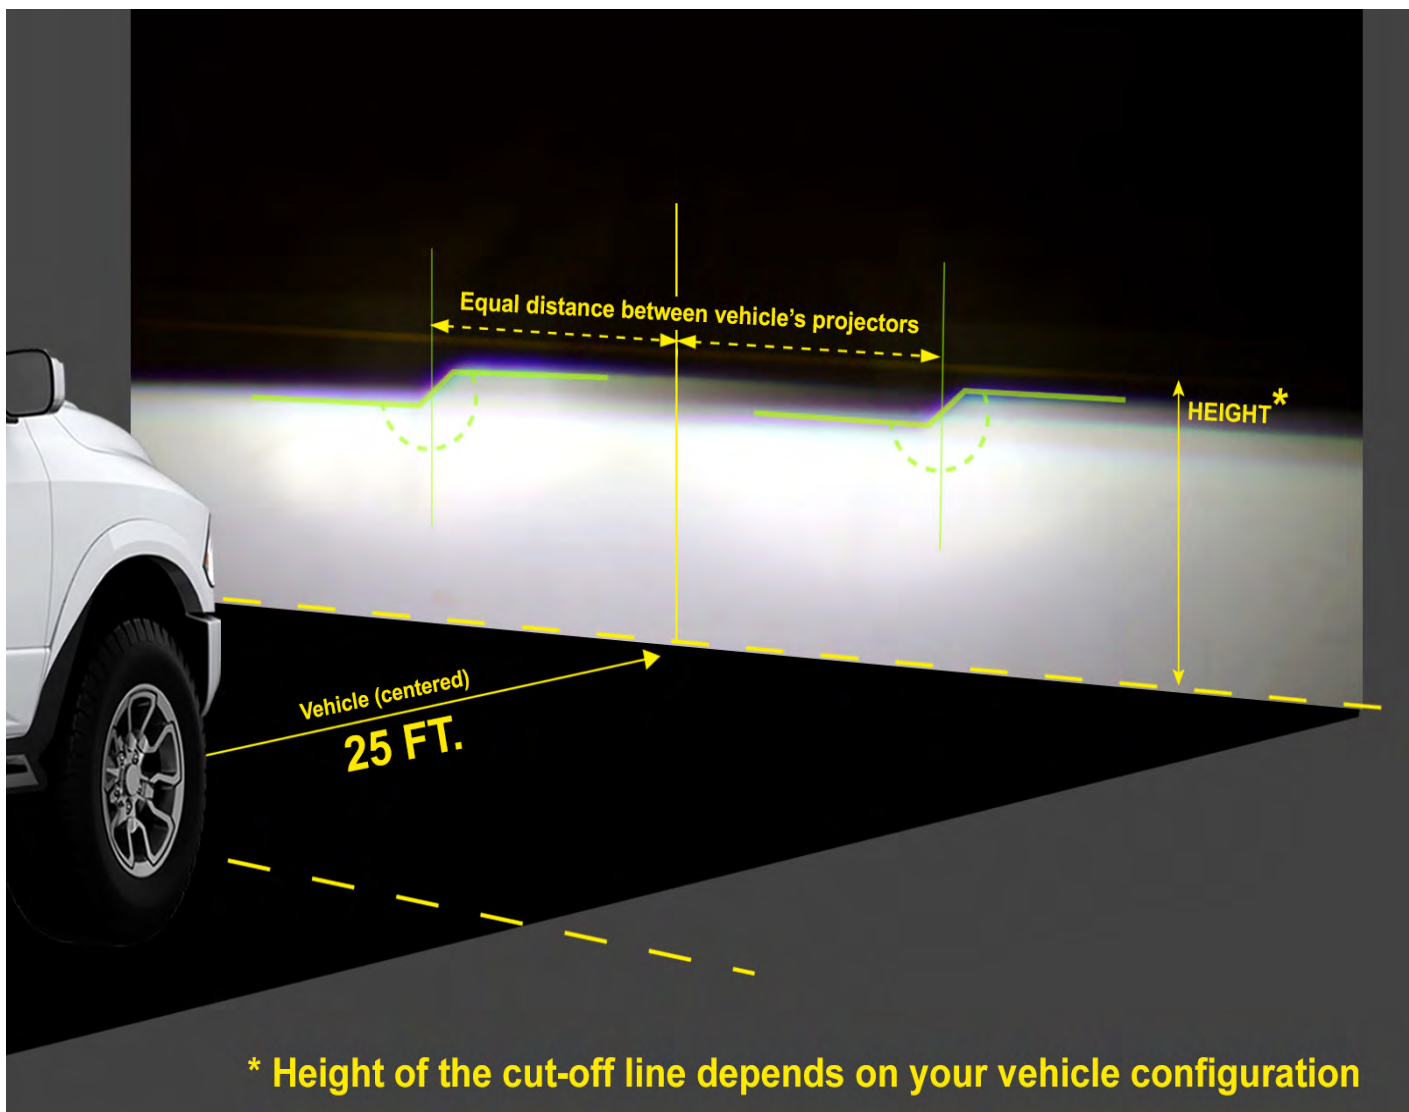

STEP 6. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **14-19 Lexus GX 460 HEADLIGHTS**.

