

Installation Guide for 2016-18 Chevrolet Silverado 1500 Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2016-18 Chevrolet Silverado 1500

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove the radiator shroud
- **STEP 3.** Remove the grille
- **STEP 4.** Remove the headlight bolts
- **STEP 5.** Remove the headlights

PART II INSTALL HEADLIGHTS

- **STEP 1.** Install ALPHAREX headlights
- **STEP 2.** Test the headlight functions
- **STEP 4.** Adjust headlight level
- **STEP 5.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal Panel Popper



Flat Screwdriver



Phillips Screwdriver



1/4 Ratchet



1/4 Extension

10mm



Socket

T15
Star Torx



Socket

BEFORE WE GET STARTED



IF YOUR VEHICLE IS EQUIPPED WITHOUT LED TURN SIGNAL NO NEED CONVERTER

IF YOUR VEHICLE IS EQUIPPED WITH LED TURN SIGNAL A CONVERTER IS NEEDED




STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle, always start by disconnecting the negative battery terminal.

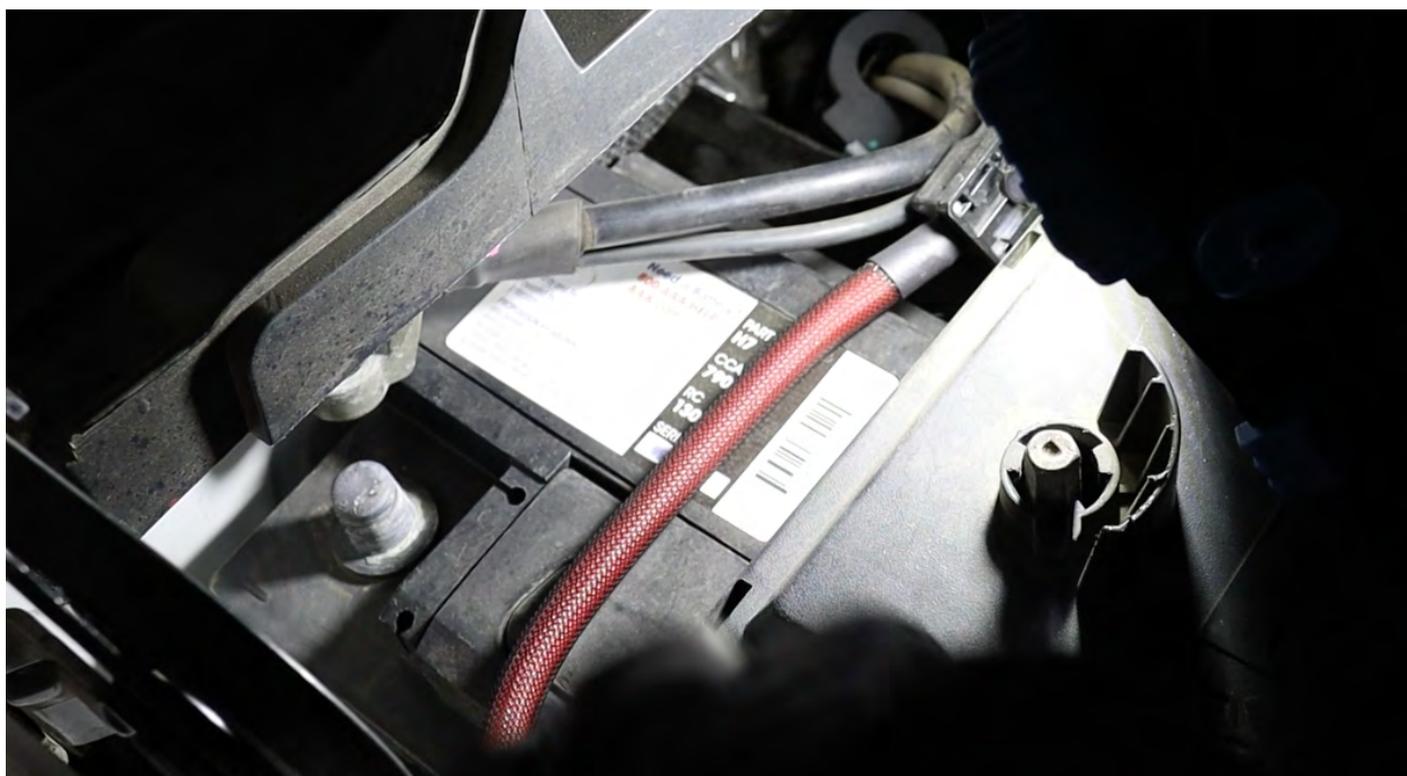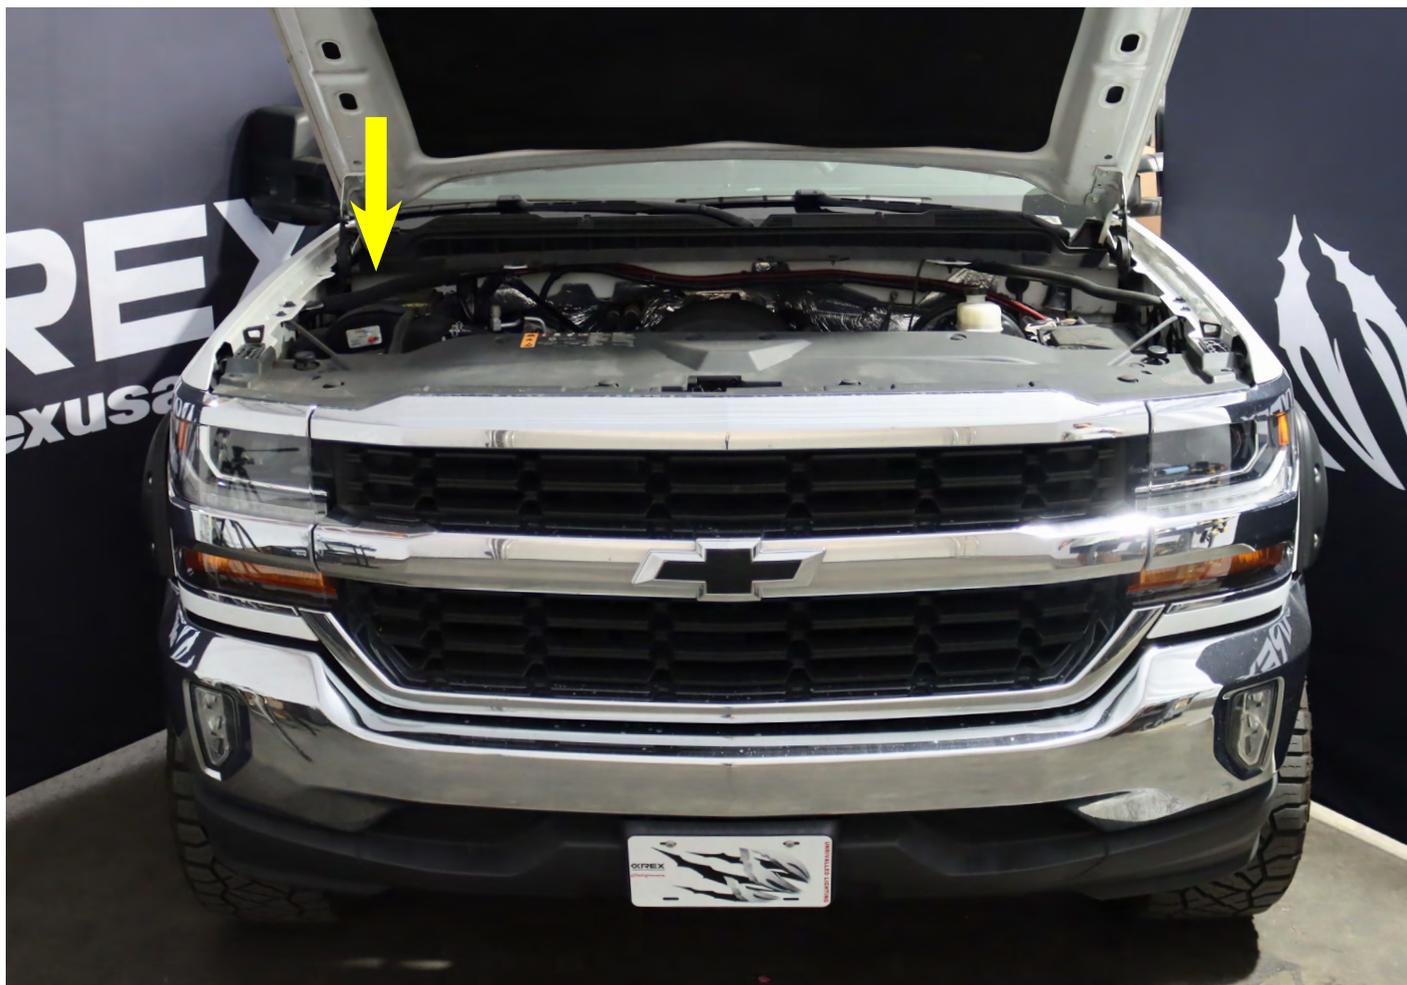

STEP 2. REMOVE THE RADIATOR SHROUD

Utilize a panel popper to begin the removal process by extracting (12) plastic push pins that are securing the radiator shroud.

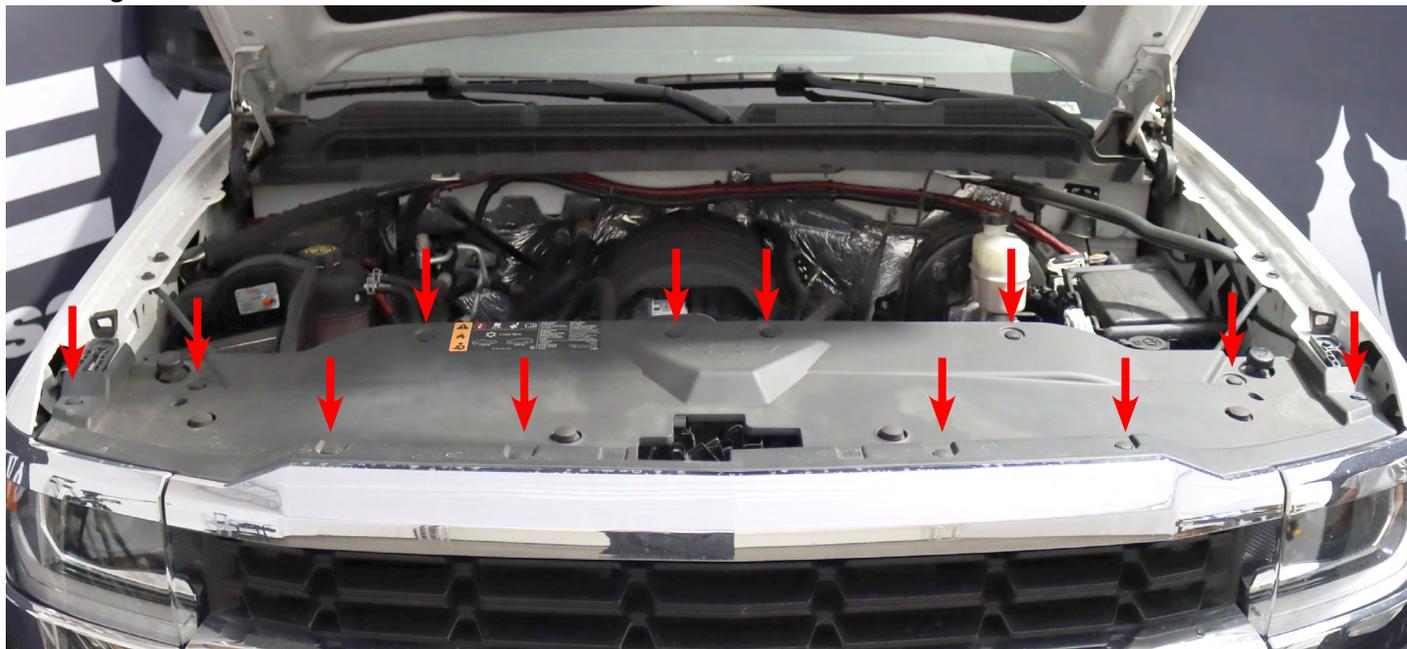



STEP 3. REMOVE THE GRILLE

Unscrew the four 10mm bolts from the top of the grille.




Subsequently, carefully pull the grille towards you to release it from the 6 insert mounts. Set it aside for later reinstallation.

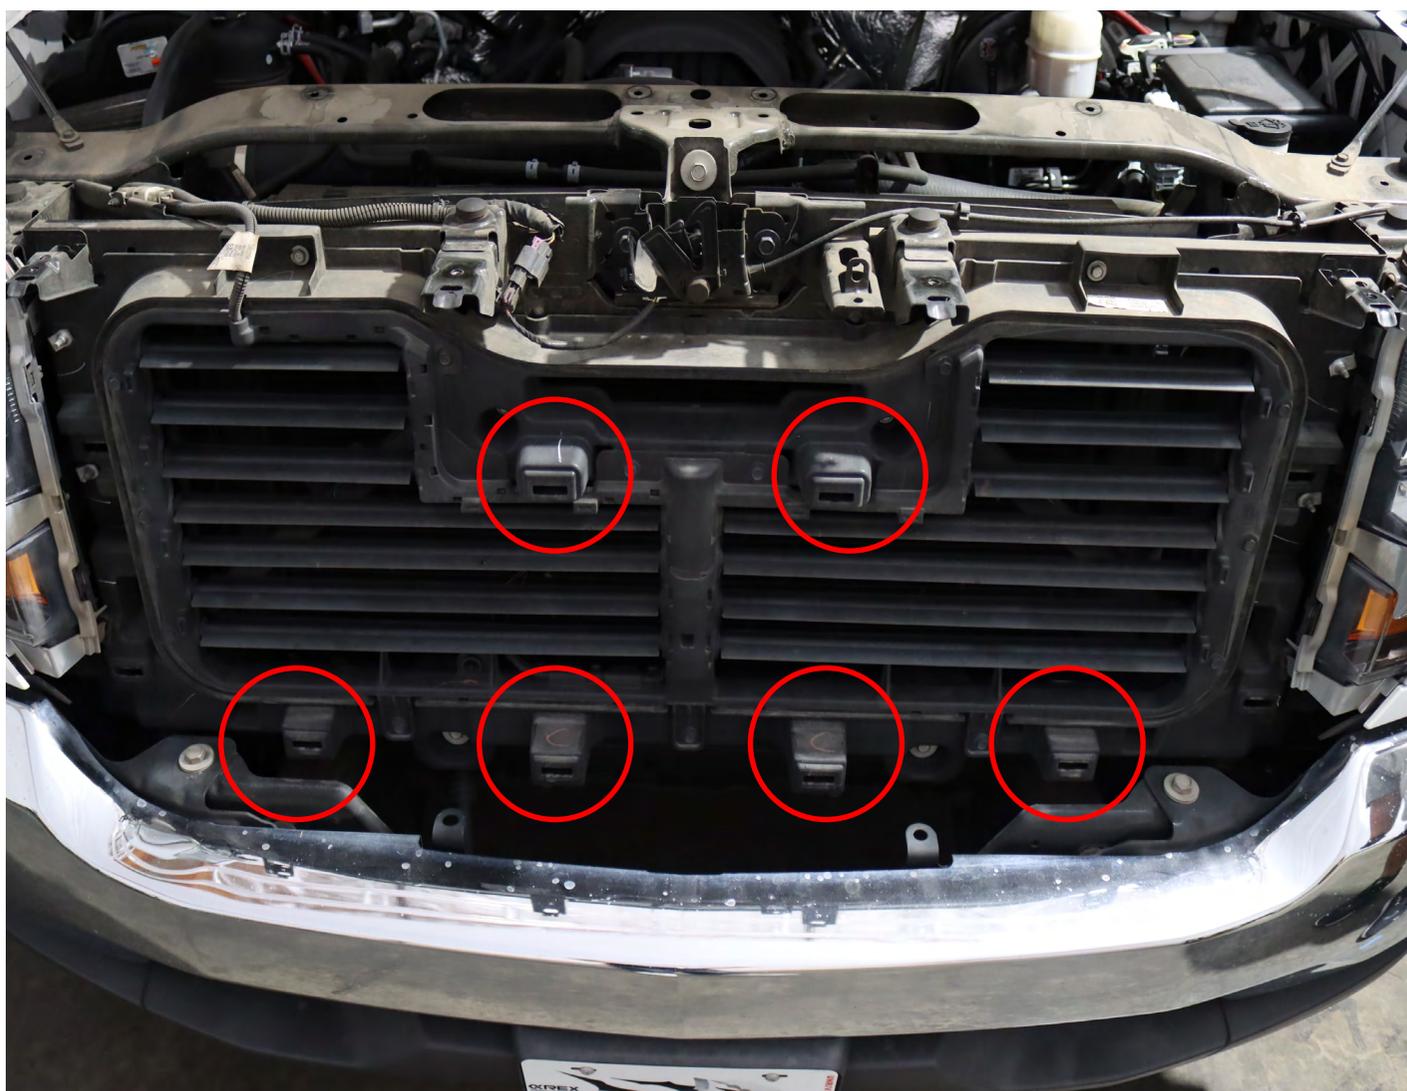

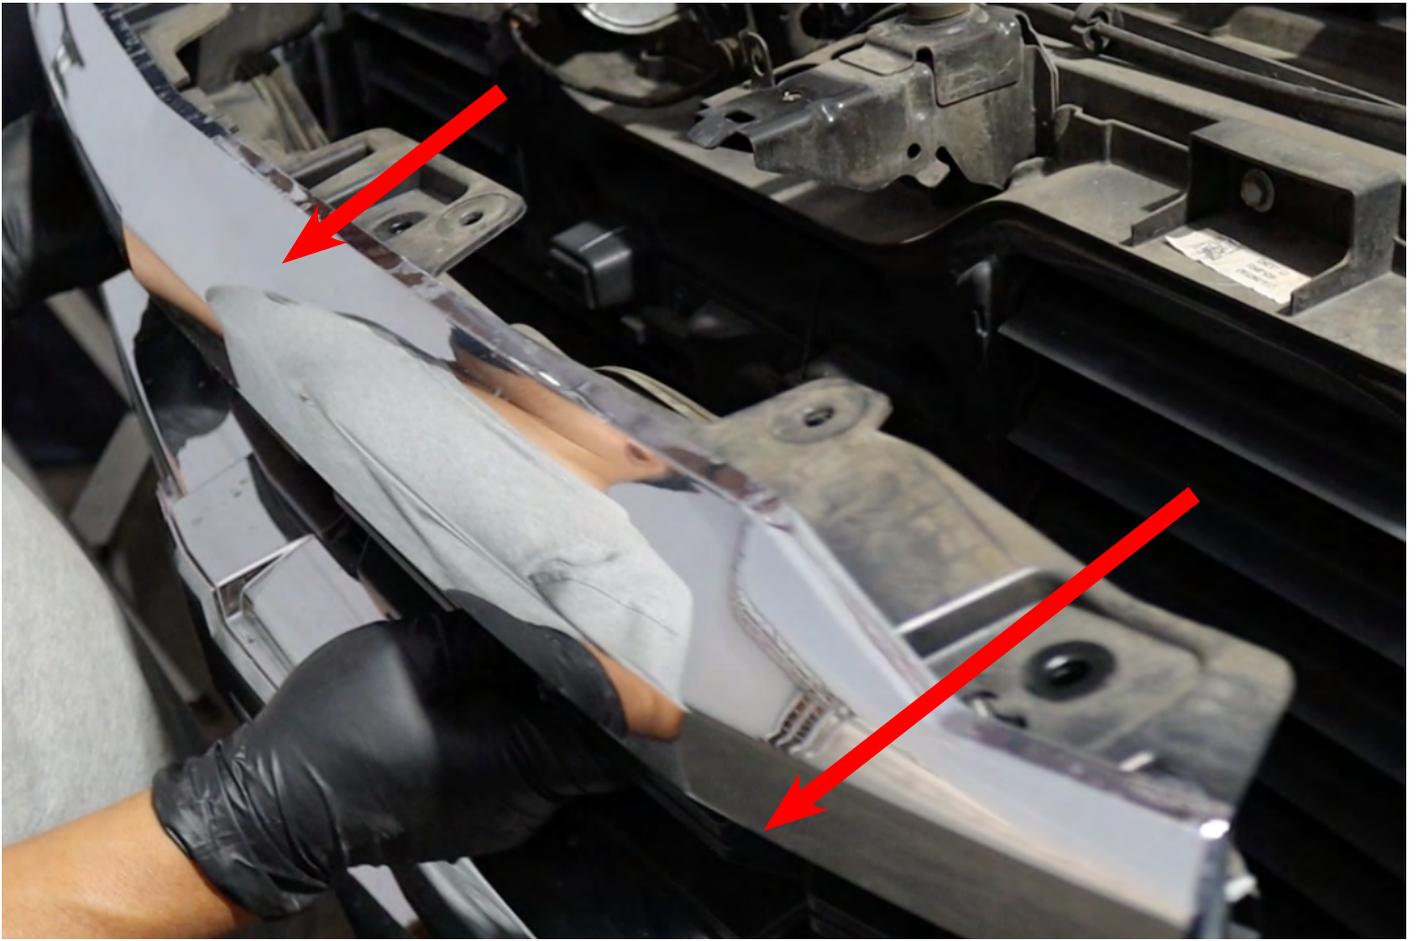


STEP 4. REMOVE THE HEADLIGHT BOLTS


To remove the headlight, you'll need to take out 4 X 10mm bolts. There are two bolts on the top, one on the side, and one from the inner front bumper.

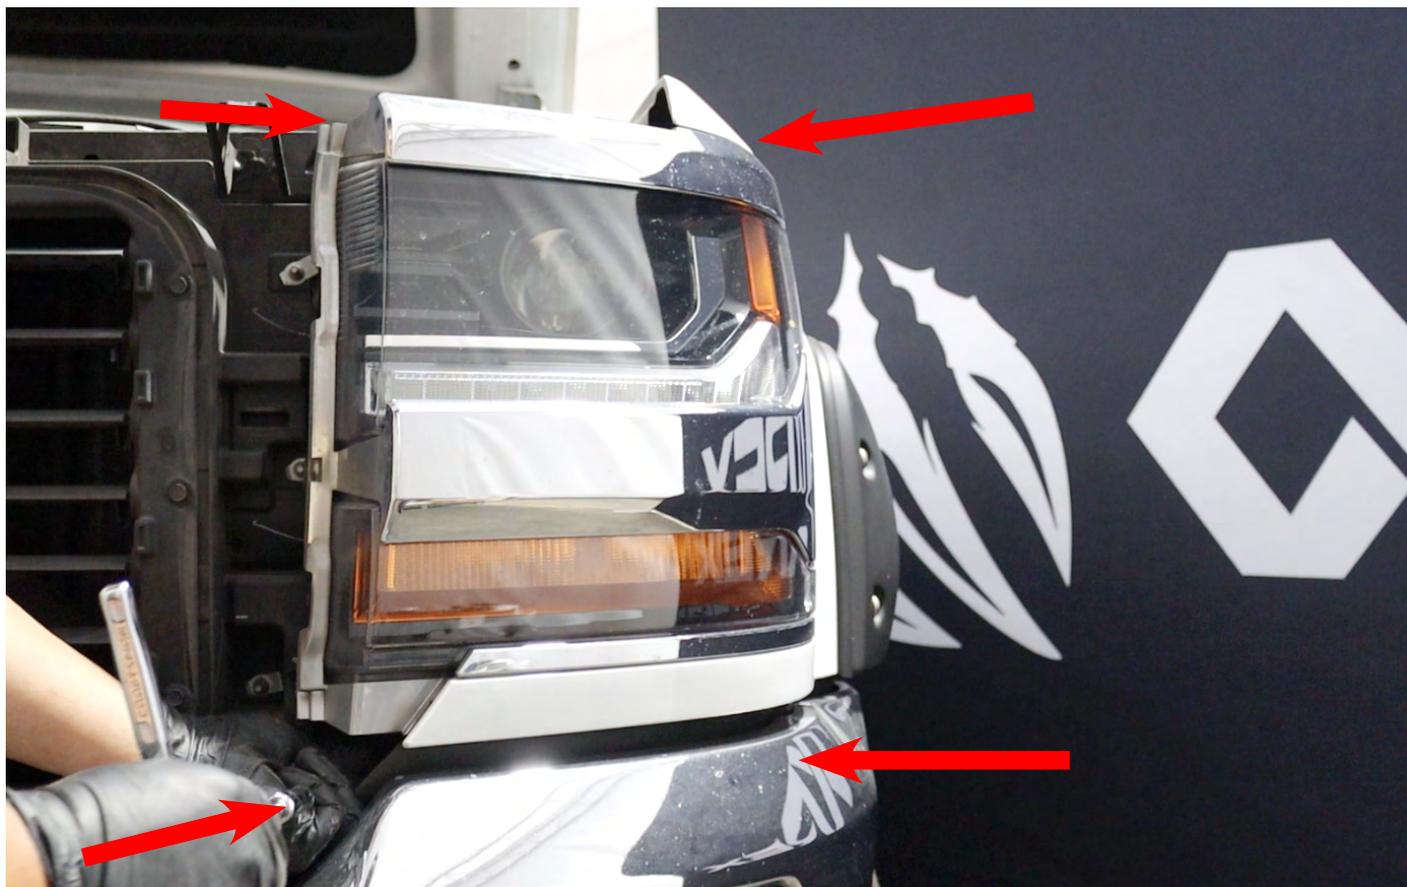

To access the headlight bolt from the inner bumper, first, remove the 2 X T15 screws from the wheelwell.

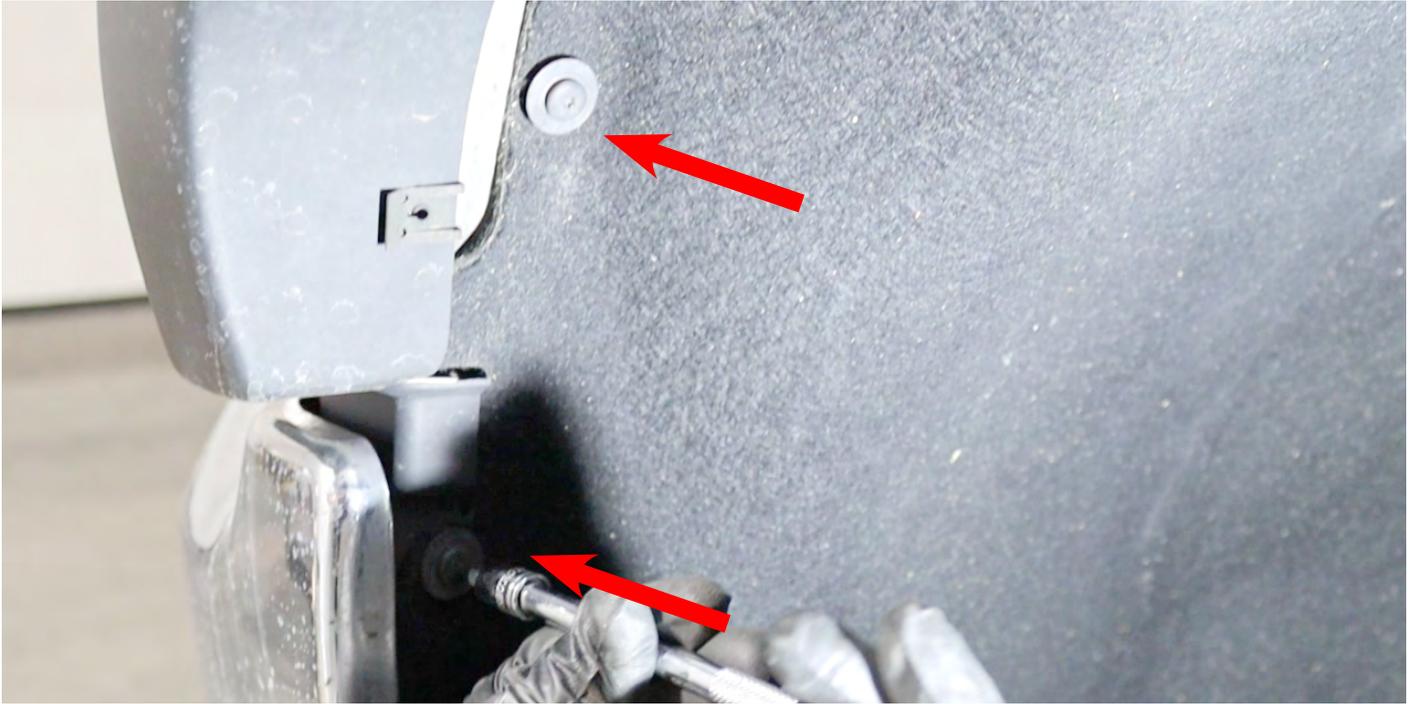


Subsequently, use a panel popper to widely open the guard cover, providing access to the headlight's bolt. Utilize a ratchet and extension socket to help remove the 10mm bolt. Repeat the same steps for the other side of the headlight.

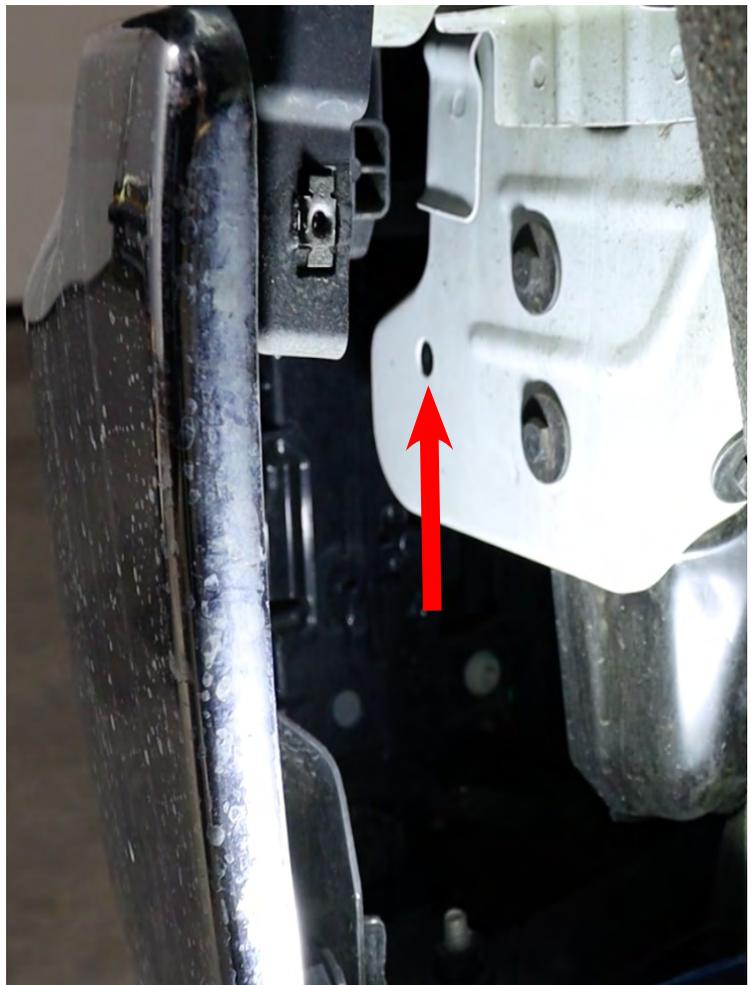

STEP 5. REMOVE THE HEADLIGHTS

Disconnect the headlight socket and gently pull the headlight assembly outward from your truck. Repeat the same step for the other side.

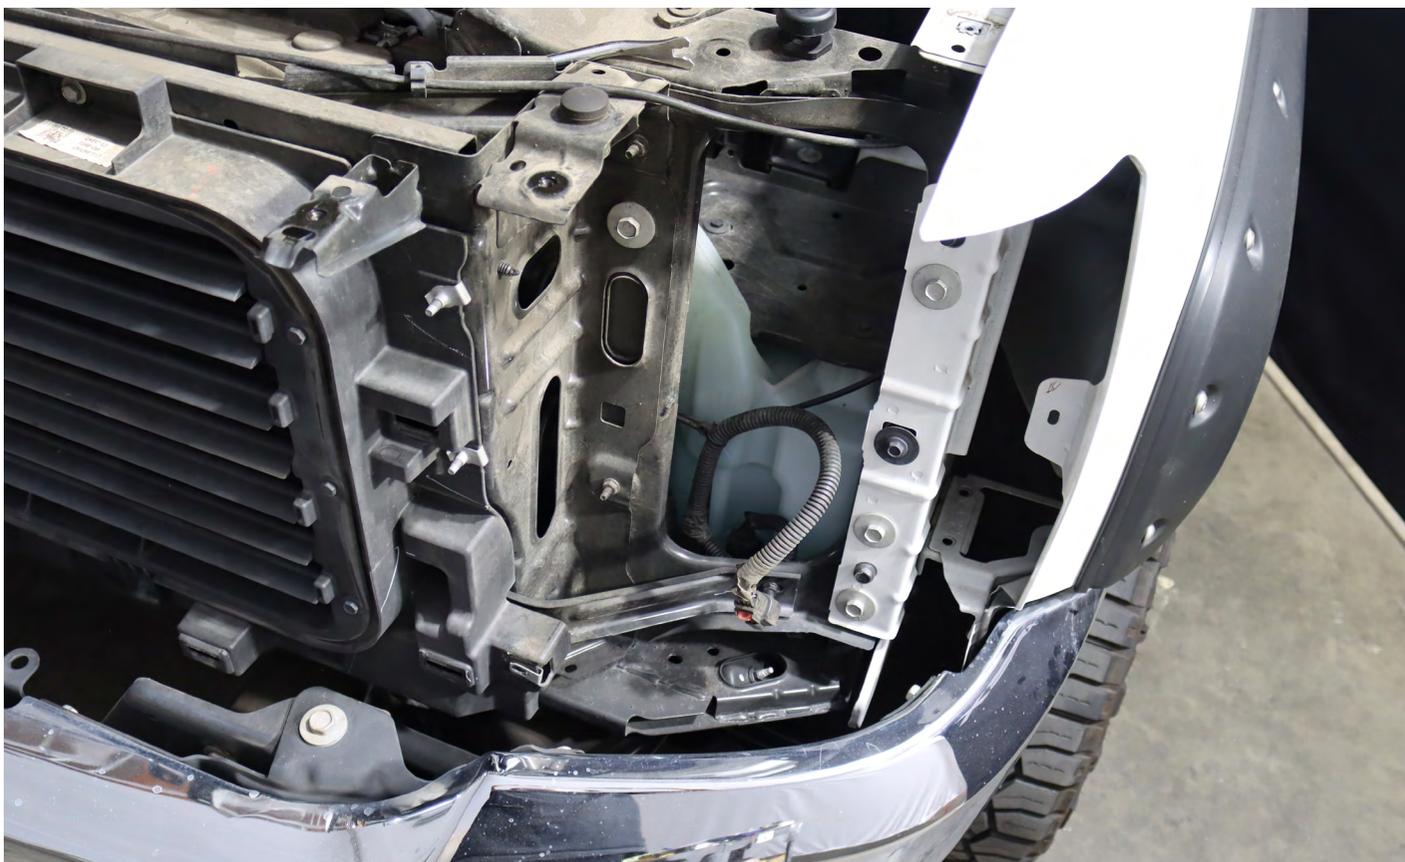

PART II INSTALL HEADLIGHTS

STEP 1. INSTALL ALPHAREX HEADLIGHTS



Reconnect the battery negative terminal and plug the light socket into the new ALPHAREX headlights. **DO NOT USE DIELECTRIC GREASE!**




Secure the headlight bolts and reverse the removal process to complete the installation.





STEP 2. TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.

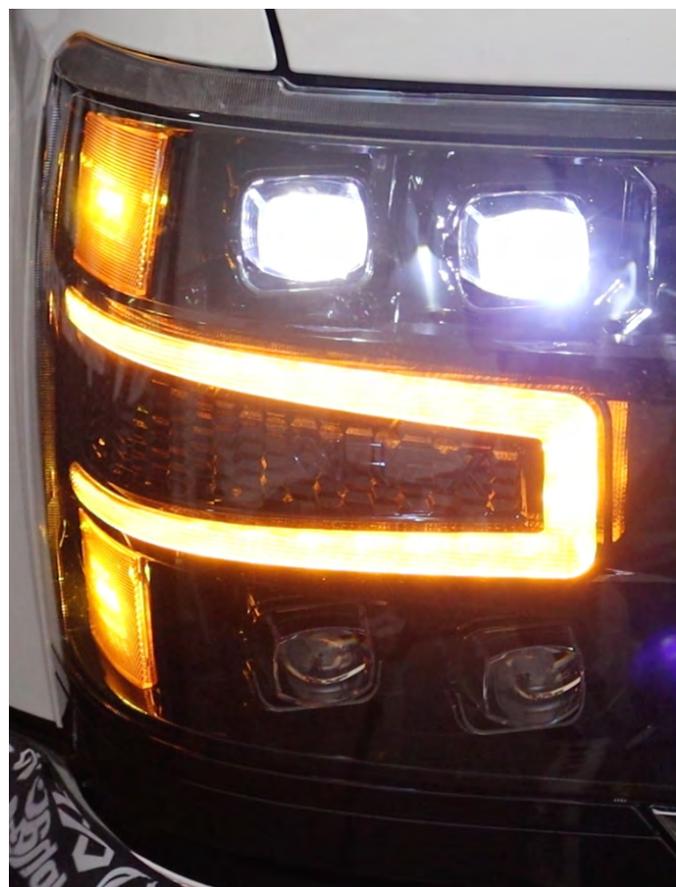


STEP 3. ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

Clockwise to lower the level

Counterclockwise to raise the level

Follow the same procedure for the other headlight.

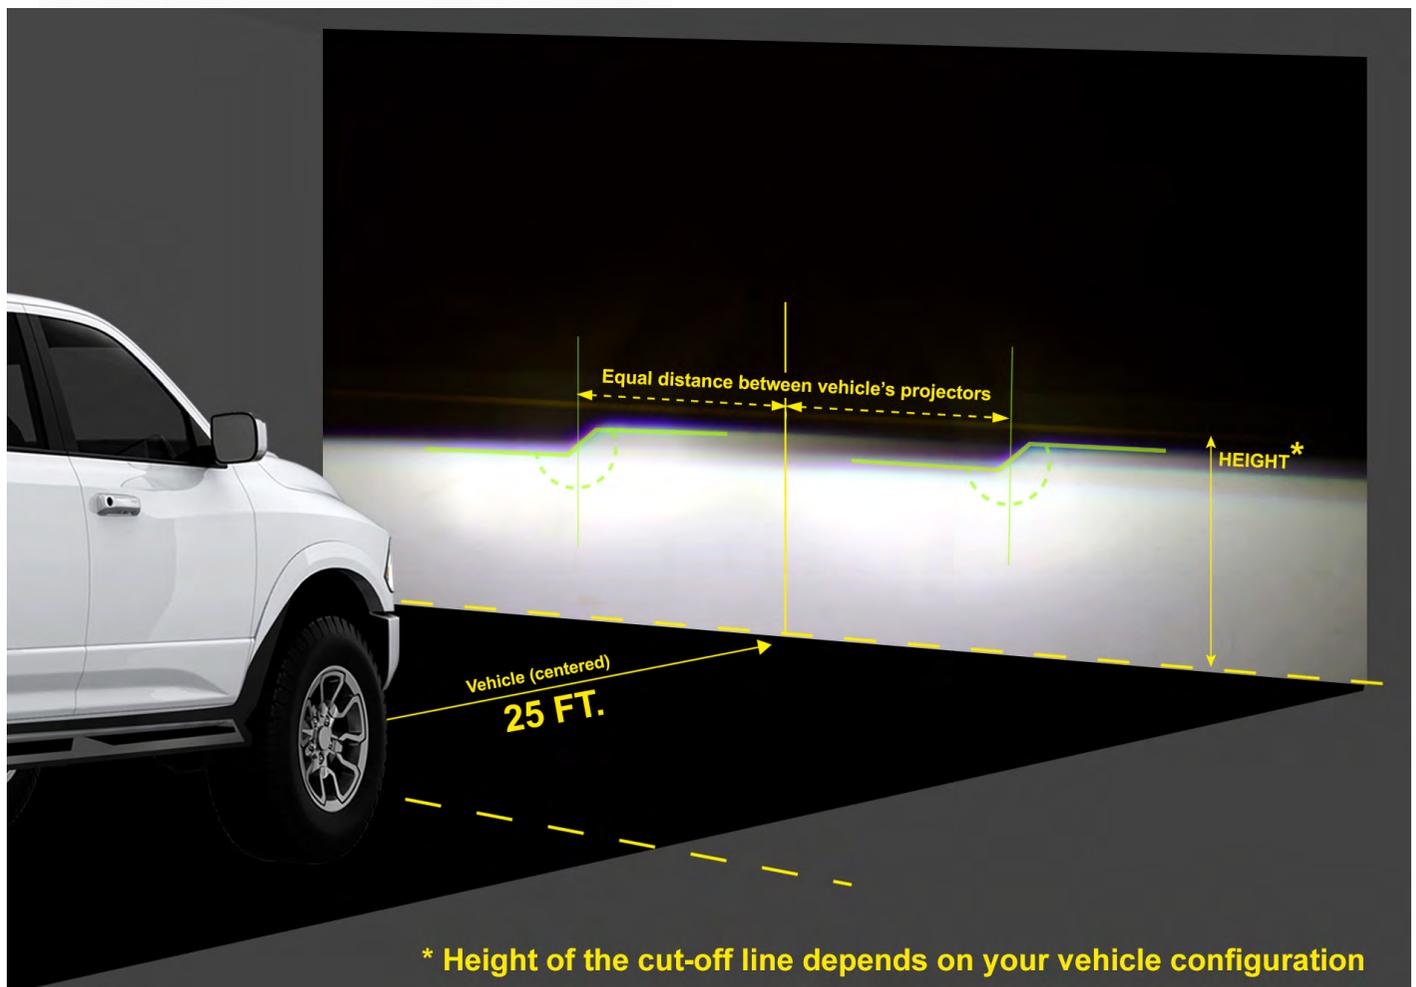

STEP 4. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **16-18 Chevrolet Silverado 1500 HEADLIGHTS.**

