

Installation Guide for 2016-23 Toyota Tacoma LED Tail lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX TAIL LIGHTS** for your 2016-23 Toyota Tacoma

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tail lights bolts
- **STEP 2.** Unplug sockets and remove tail lights

PART II INSTALL ALPHAREX TAIL LIGHTS

- **STEP 1.** Plug the sockets and install tail lights
- **STEP 2.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.

PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Power Tool



1/4 Ratchet



1/4 Extension

10mm



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.

Whenever working on your vehicle, always make sure your vehicle is OFF and parked.



STEP 1. REMOVE TAIL LIGHTS BOLTS

Open the trunk gate and initiate the process by removing the bolts securing the tail lights.



Take out the top and bottom 10mm bolts from each side of the tail lights.





Repeat the steps for the other side to fully remove the tail lights.




PART II INSTALL ALPHAREX TAIL LIGHTS




STEP 1. PLUG THE SOCKETS AND INSTALL TAIL LIGHTS

Connect the sockets directly to the ALPHAREX tail lights. **DO NOT USE DIELECTRIC GREASE!**

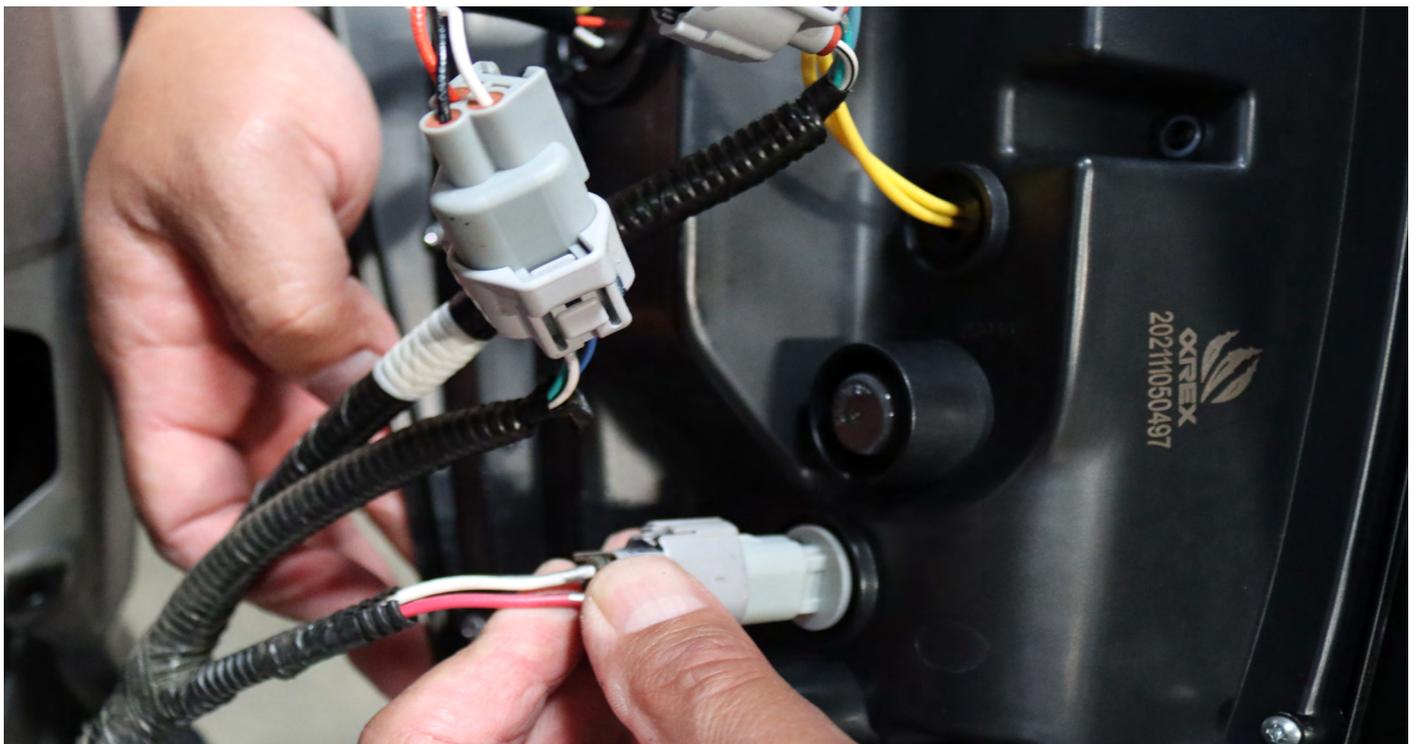



After plugging the sockets into the new ALPHAREX tail lights, proceed to reverse the removal process to install the new tail lights into the vehicle.

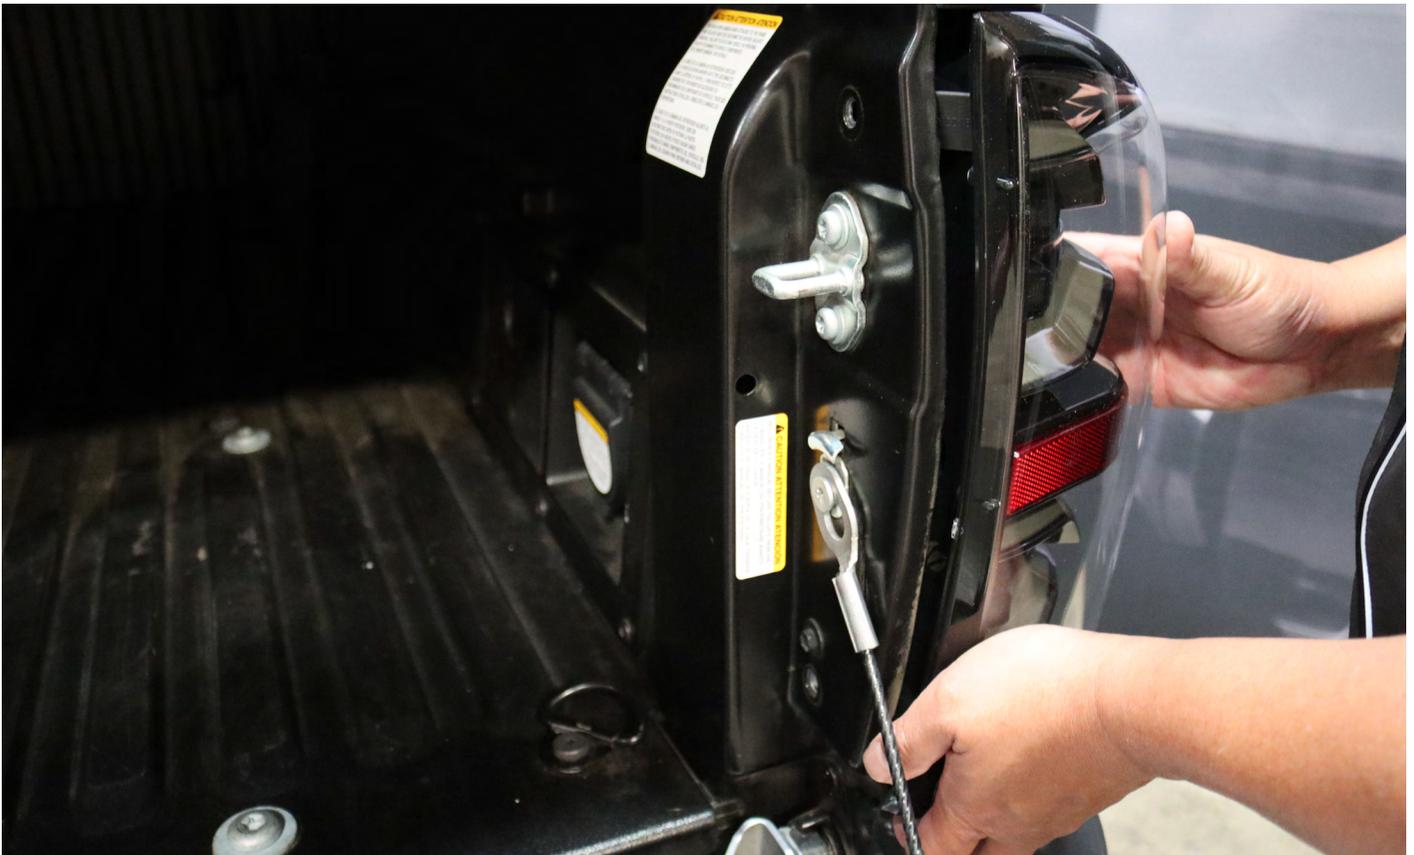

STEP 2. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX **16-23 Toyota Tacoma LED TAIL LIGHTS**.

