



Installation Guide for 19-22 Chevy Silverado PRO-Series LED Tail lights (FOR VEHICLE EQUIPPED WITH FACTORY HALOGEN TAIL LIGHTS)

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX TAIL LIGHTS** for your 19-22 Chevy Silverado step by step.

DO NOT USE DIELECTRIC GREASE!



Table of Contents



PART I REMOVE TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove tail lights screws
- **STEP 2.** Unplug and remove the tail lights

PART II INSTALL ALPHAREX TAIL LIGHTS

- **STEP 1.** Install external resistors
- **STEP 2.** Plug the tail lights
- **STEP 3.** Install the tail lights
- **STEP 4.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Torx
Screwdriver

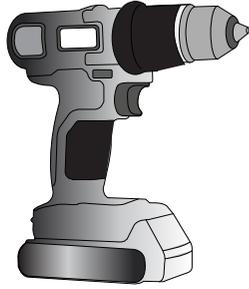

Power Tool



Pliers



Pick Tool



1/4 Ratchet



1/4 Extension

T15
Star Torx



Socket

NOTE: Whenever using a power tool, please make sure do not overtighten the screws.

Whenever working on your vehicle always make sure your vehicle is parked with the ignition off.




STEP 1. REMOVE TAIL LIGHTS SCREWS


Open the trunk gate and start by removing the tail light's screws.



Remove the top and bottom T15 screws from each side of the tail lights.

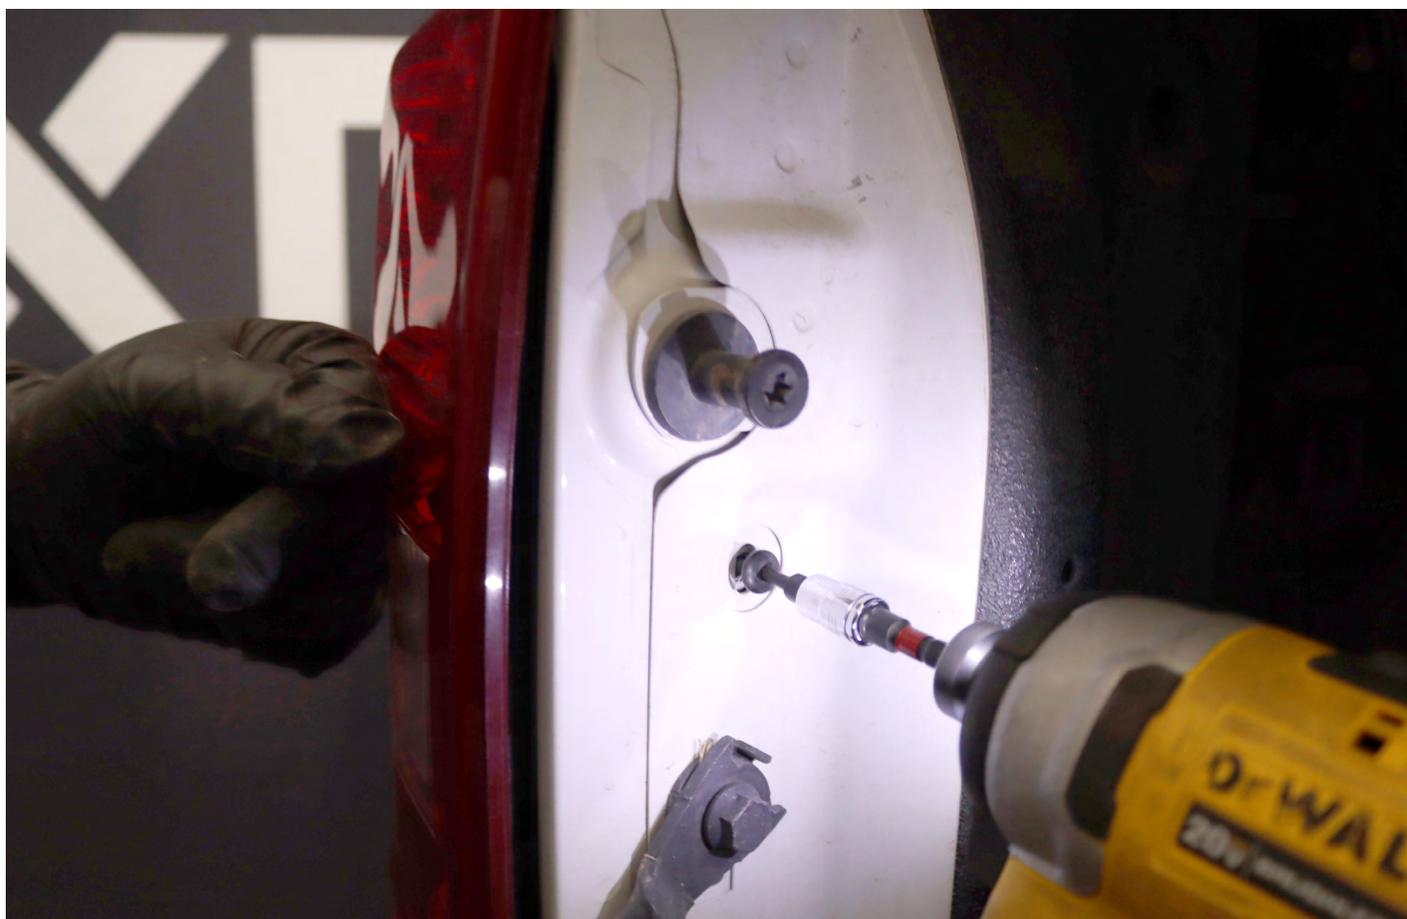

Gently remove the tail lights by pulling outward.

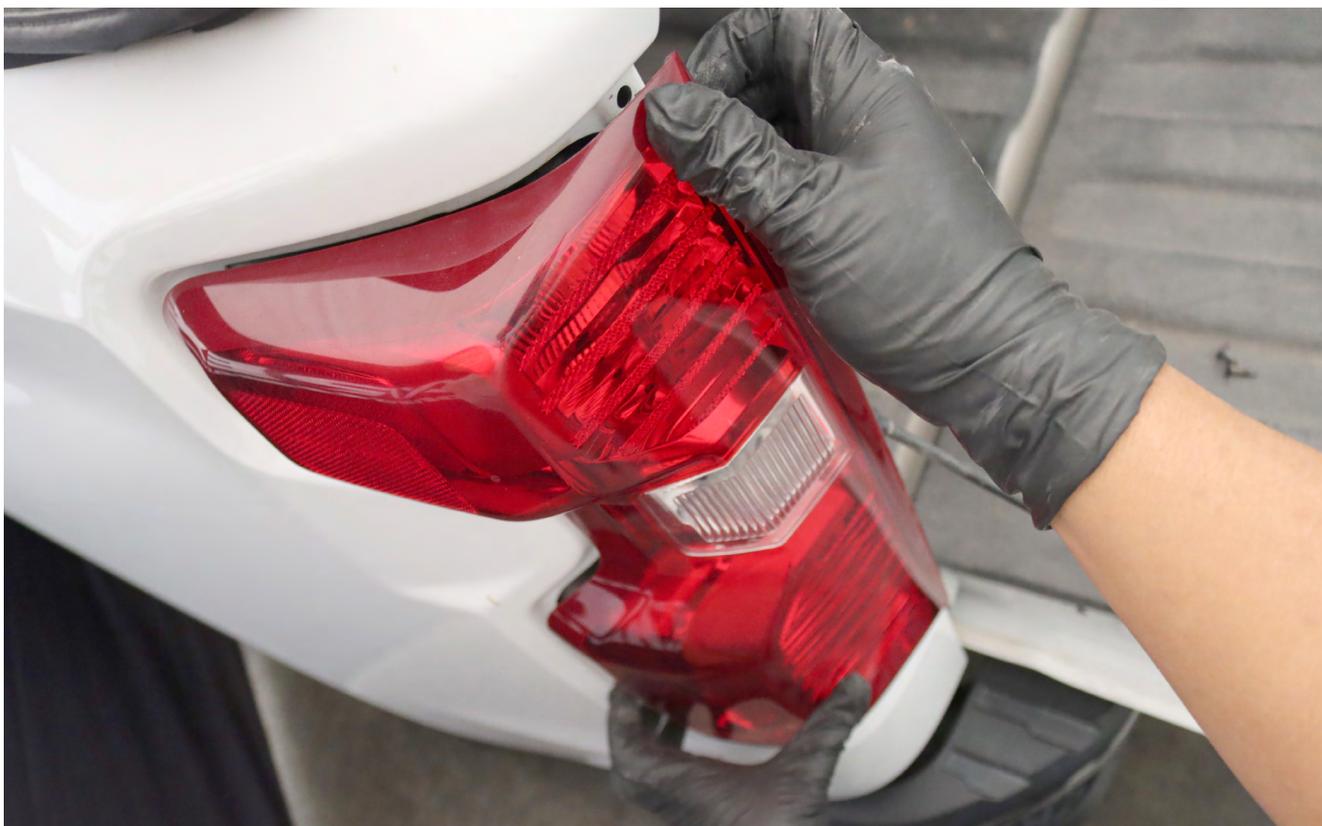


STEP 2. UNPLUG AND REMOVE THE TAIL LIGHTS

Unplug the sockets to remove the tail light.





Next, remove the tail lights' bulbs. Please repeat the same steps for the other side.

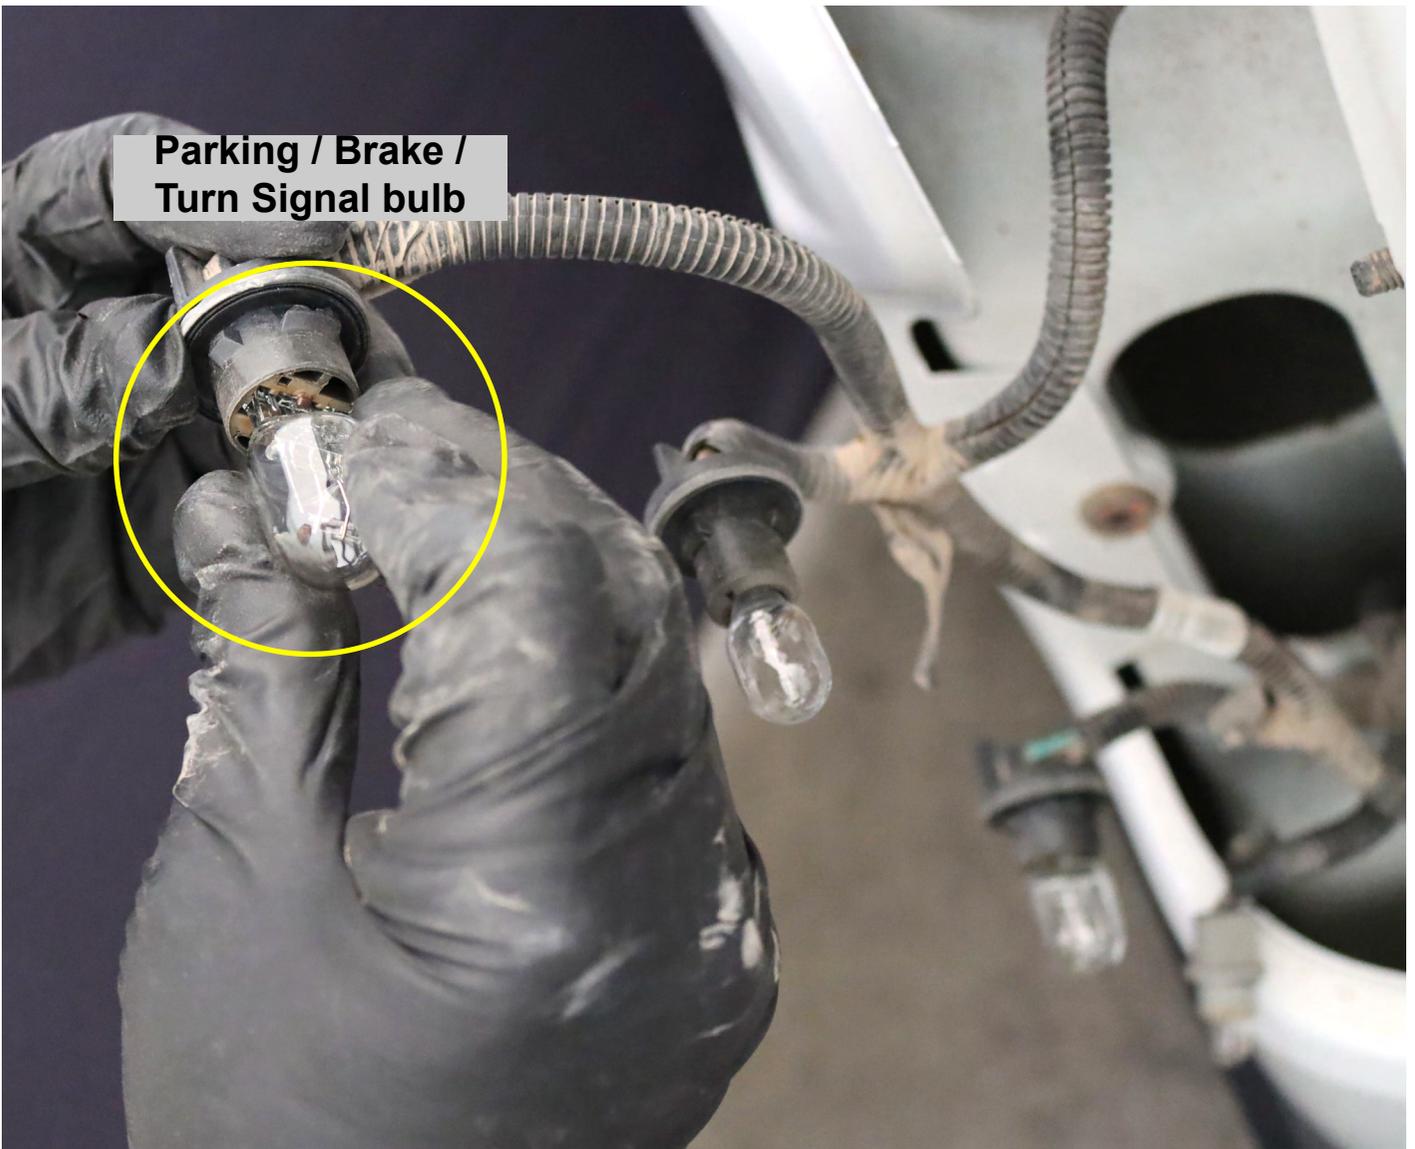


Reverse



**Parking / Brake /
Turn Signal bulb**



Parking

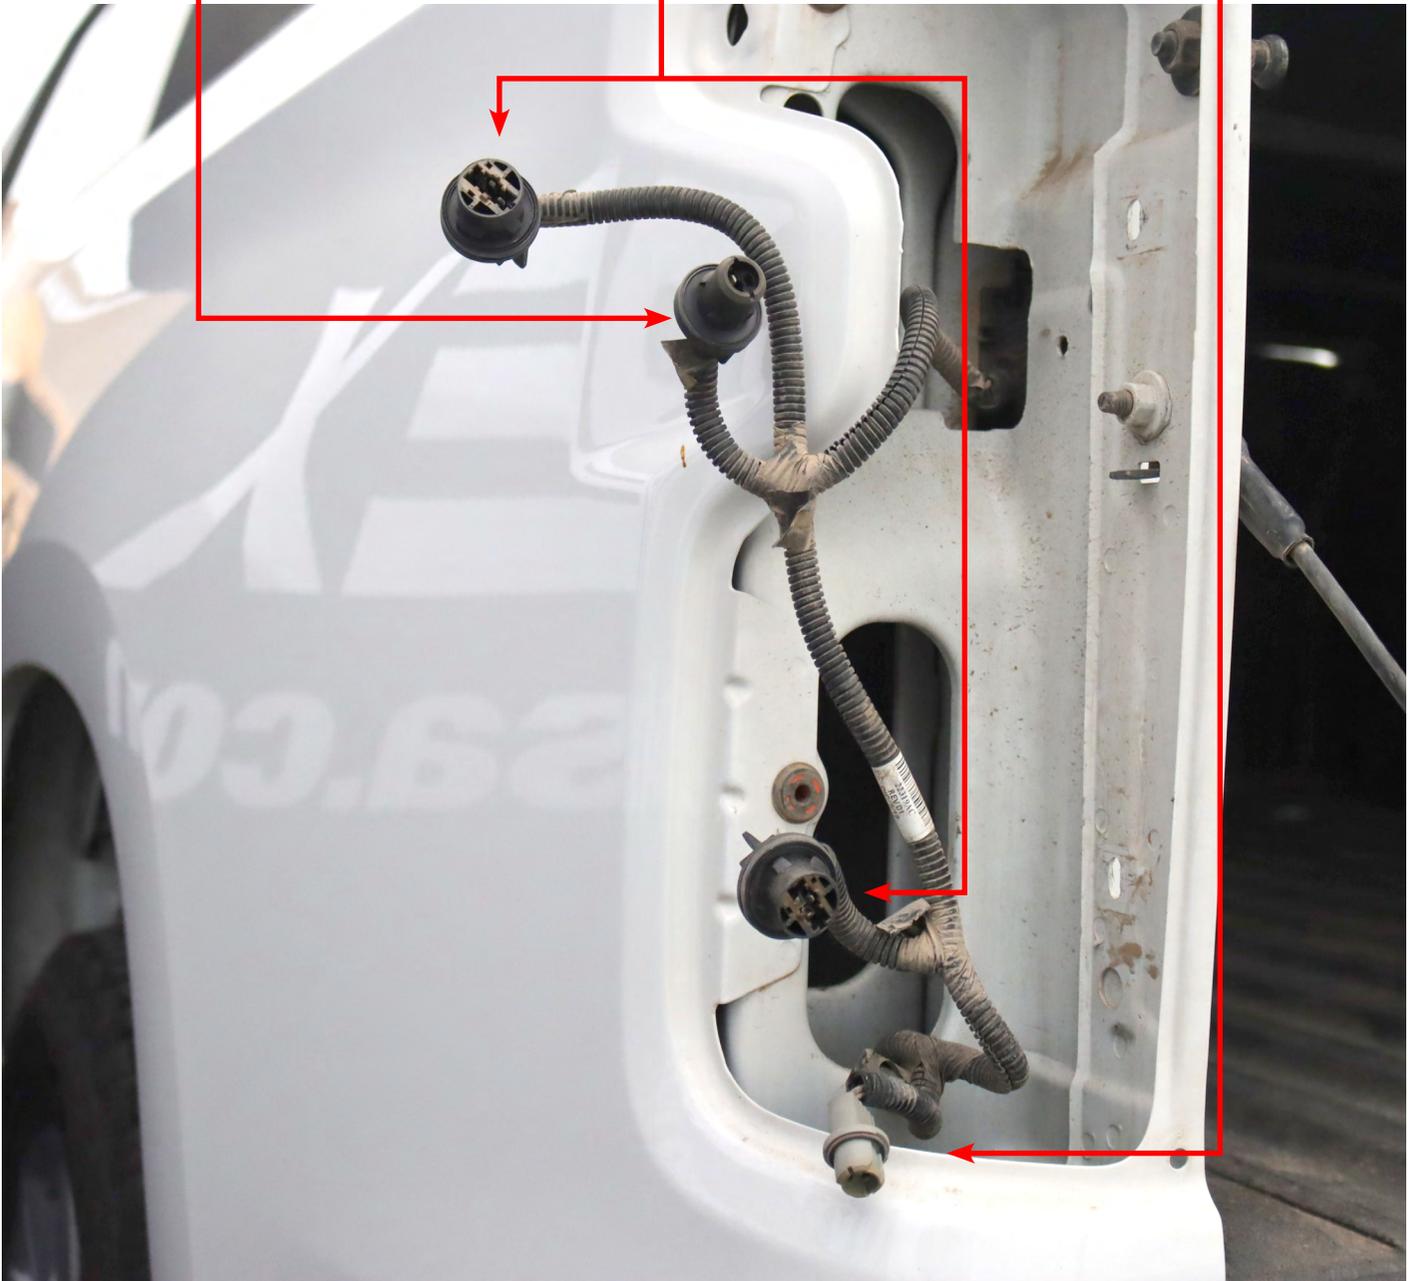


PART II INSTALL ALPHAREX TAIL LIGHTS



STEP 1. INSTALL EXTERNAL RESISTORS

First, locate the (4) external resistors inside the package.

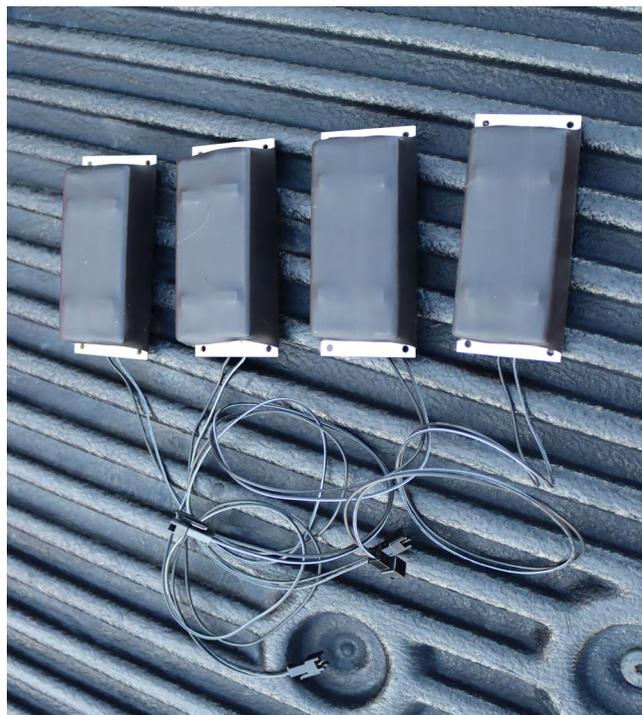

**From the back of the rear bumper (under the vehicle)
install 2 external resistors for each new ALPHAREX tail lights.**




Driver's side



Passenger's side



Route the connector plugs and wire through the firewall hole and install the 2 external resistors on the flat surface.

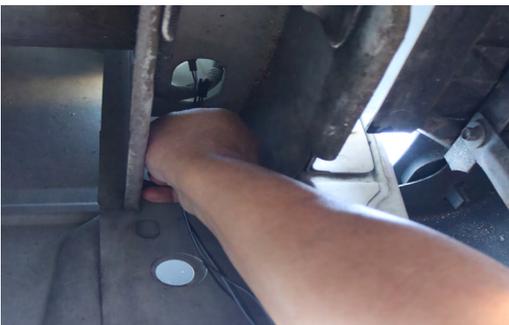




Please make sure the surface is clean from debris or dirt before mounting the resistors with included double sided tape.

STEP 2. PLUG THE TAIL LIGHTS

First, plug the external resistors to the new Alpharex tail light.
DO NOT USE DIELECTRIC GREASE!

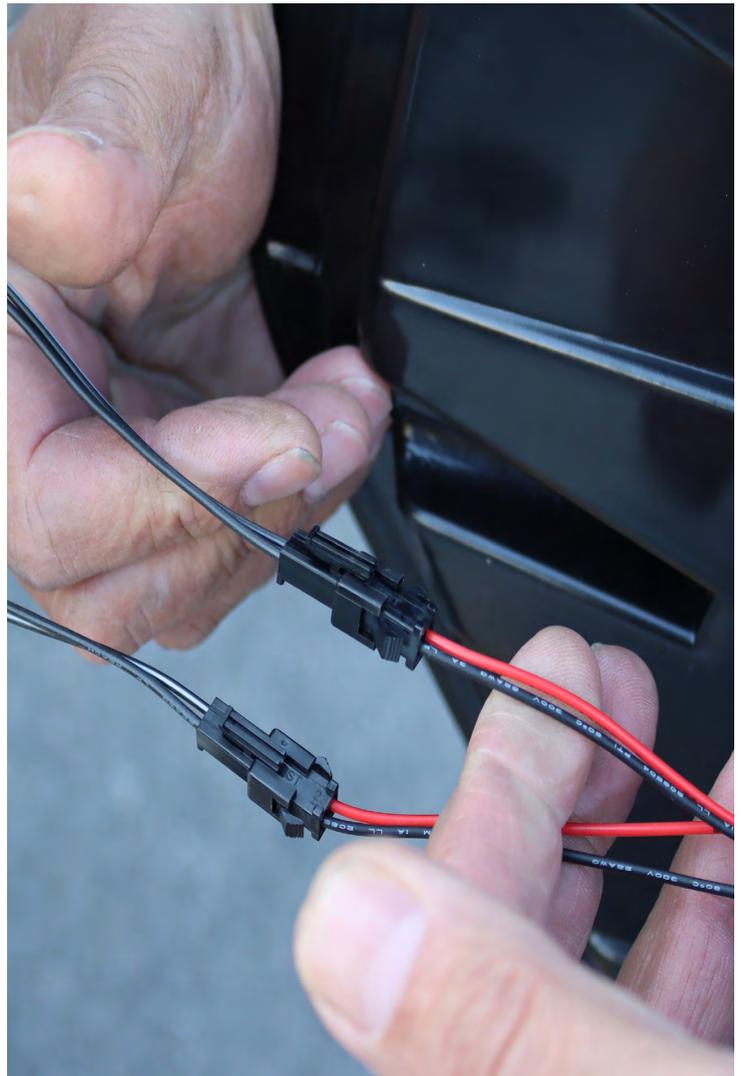


Plug the new ALPHAREX tail lights' connectors into the sockets. **DO NOT USE DIELECTRIC GREASE!**






**Twist and lock each of the sockets into the new ALPHAREX tail light.
Make sure they are tightened and secured. DO NOT USE DIELECTRIC GREASE!**
Please follow the same steps for the other tail light.

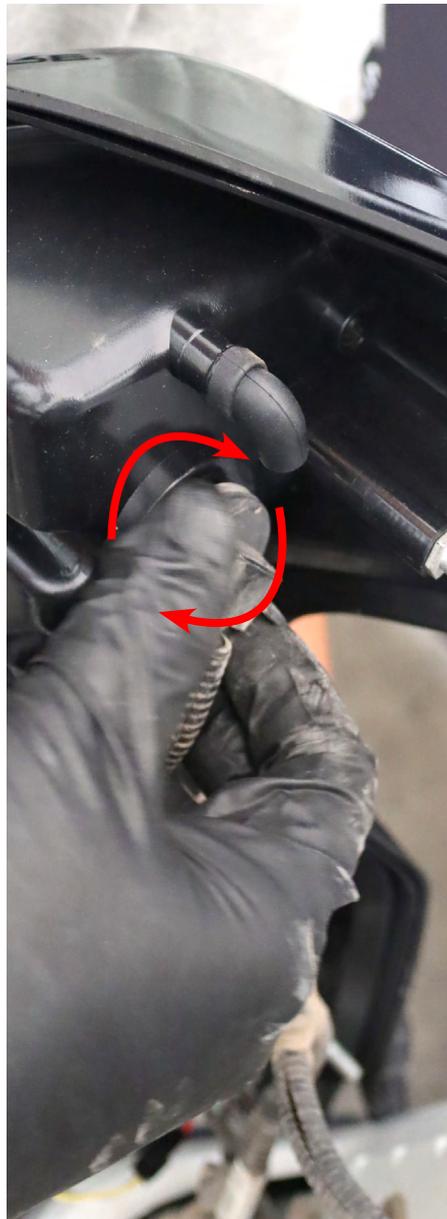


STEP 3. INSTALL THE TAIL LIGHTS

Gently push the tail light into the mounting position and use T15 screwdriver to tighten the top and bottom screws.

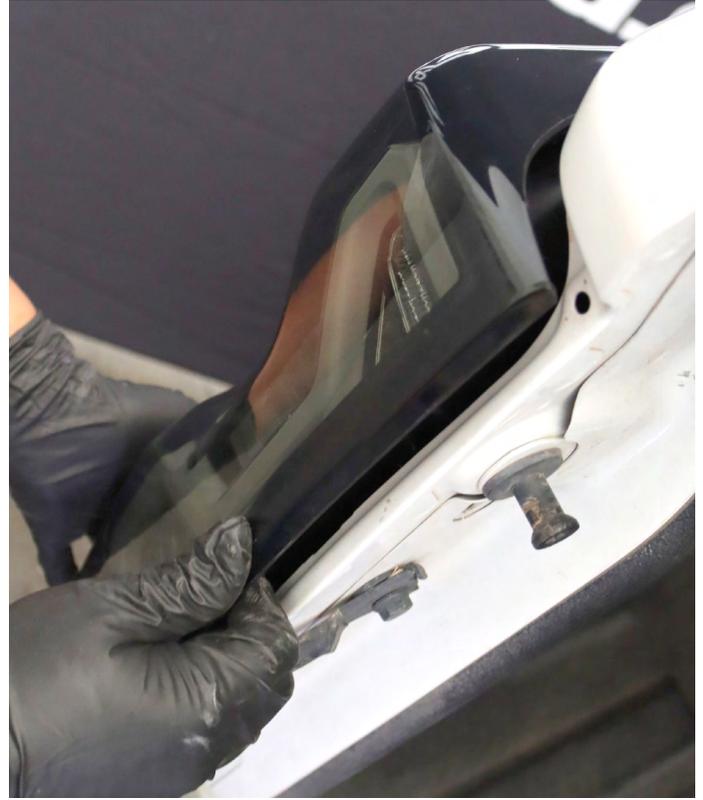

Please repeat the same process for the other side of the tail light.

NOTE: *Whenever using a power tool, please make sure do not overtighten the bolts.*

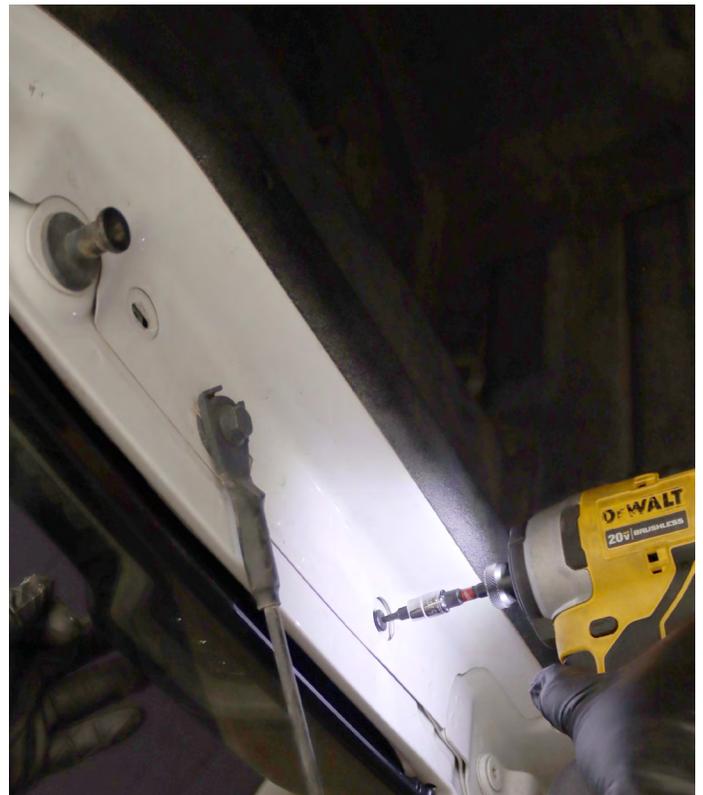

STEP 4. COMPLETE INSTALLATION

Congratulations!
you have completed the installation for ALPHAREX 19-22 Chevy Silverado
PRO-Series LED tail lights.

