



INSTALLATION GUIDE

2022-UP/TOYOTA TUNDRA

STEALTH WINCH KIT

AC7608101NA



TOOLS REQUIRED

(Wrench) 17mm, 9/16, 3/4
(Socket) 17mm, 9/16, 3/4
Ratchet



TIME REQUIRED

- 20 Minutes



SKILL LEVEL



Easy

****This installation requires 2 people for best results****

⚠️ WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION ⚠️

-BEFORE YOU INSTALL THIS KIT-

Read and understand all instructions, warnings, cautions, & notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.

Customer Service (480) 671-0820

Addictive desert designs is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components.

We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these

components and the safety of the vehicle.

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information:

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover

***ALWAYS WEAR EYE PROTECTION
WHEN OPERATING POWER TOOLS***




INSTALLATION GUIDE

STEALTH WINCH KIT 2022-UP/TOYOTA TUNDRA

REMOVAL

☐ STEP 1

Install the winch to the winch mount.

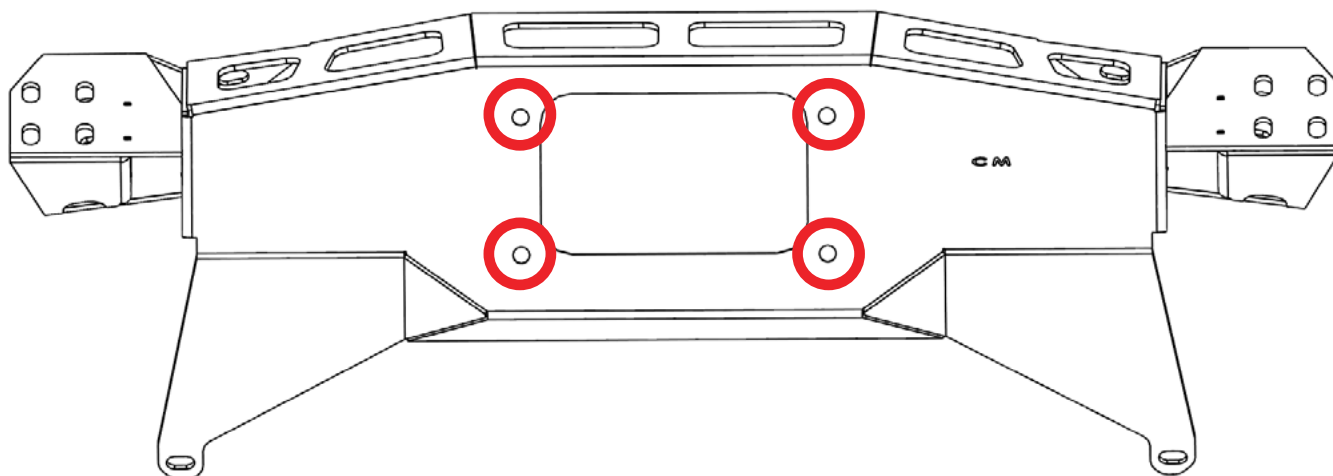




INSTALLATION GUIDE

STEALTH WINCH KIT 2022-UP/TOYOTA TUNDRA

REMOVAL

□ STEP 2

Install the winch mount by loosening the sway bar brackets for the bottom mounting holes using a (17mm socket). You will slip the mount above the bracket as shown on **page 3** and reinstall with stock bolts. ****DO NOT remove the bracket completely****

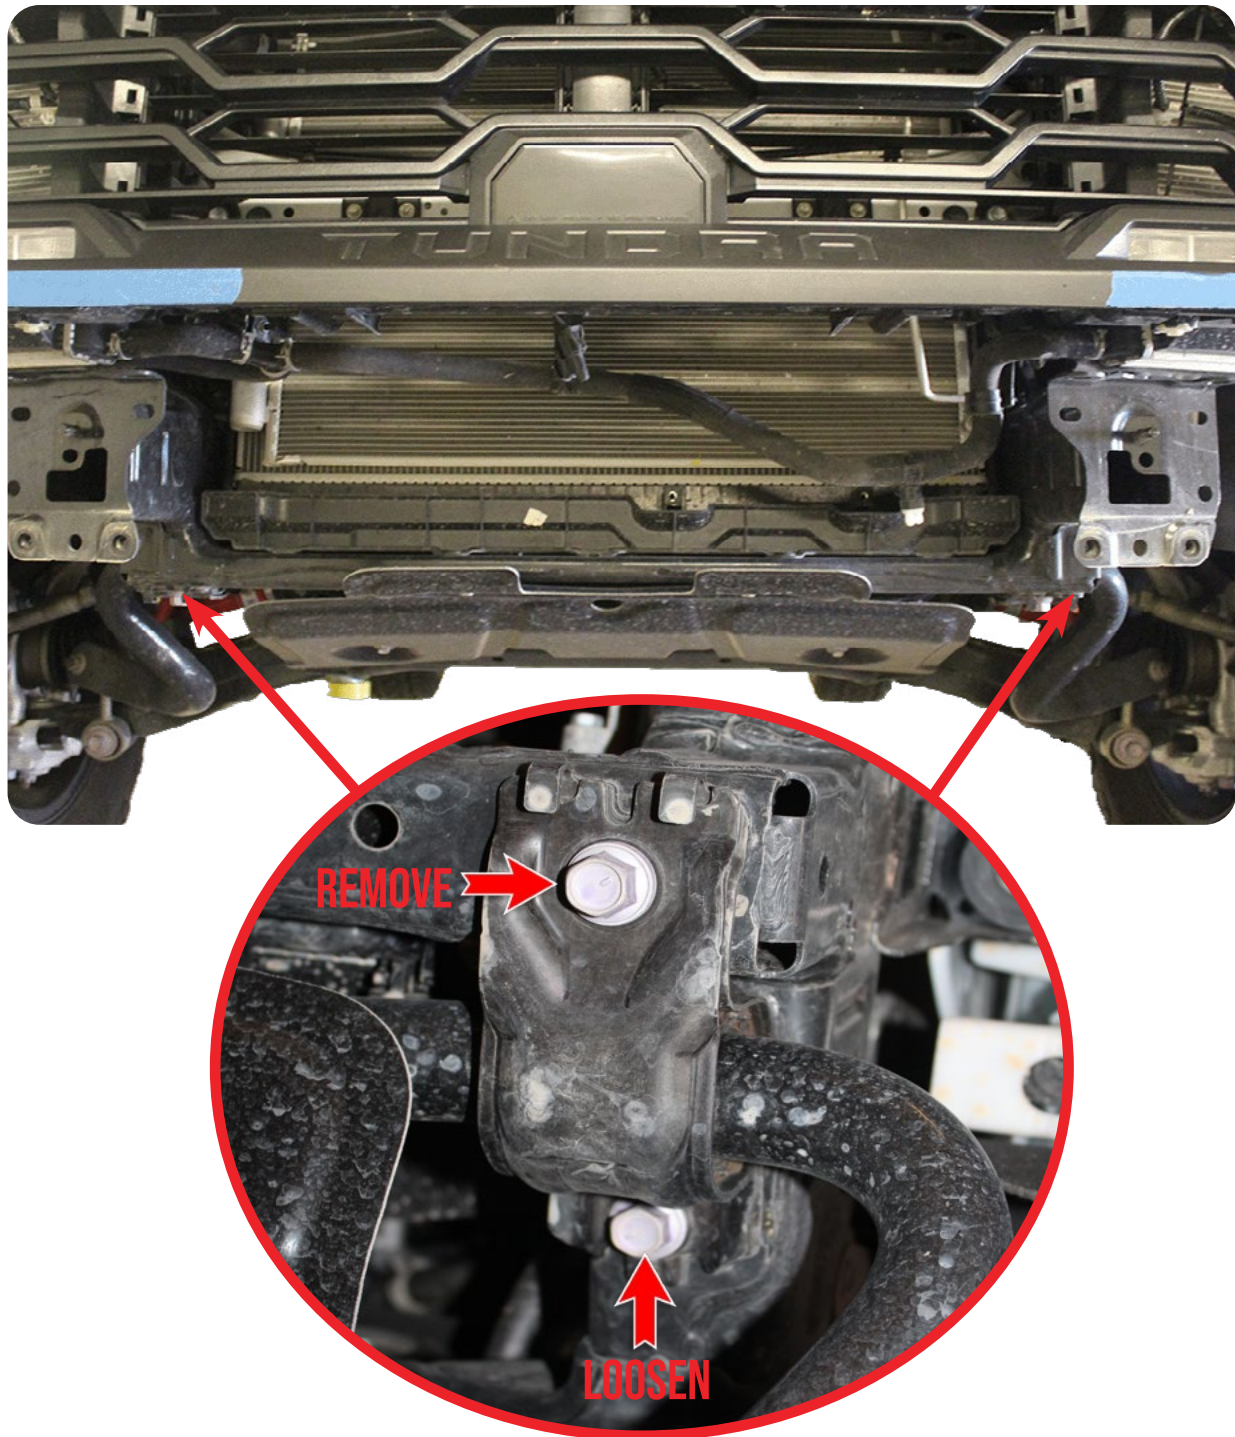




INSTALLATION GUIDE

STEALTH WINCH KIT
2022-UP/TOYOTA TUNDRA

INSTALL

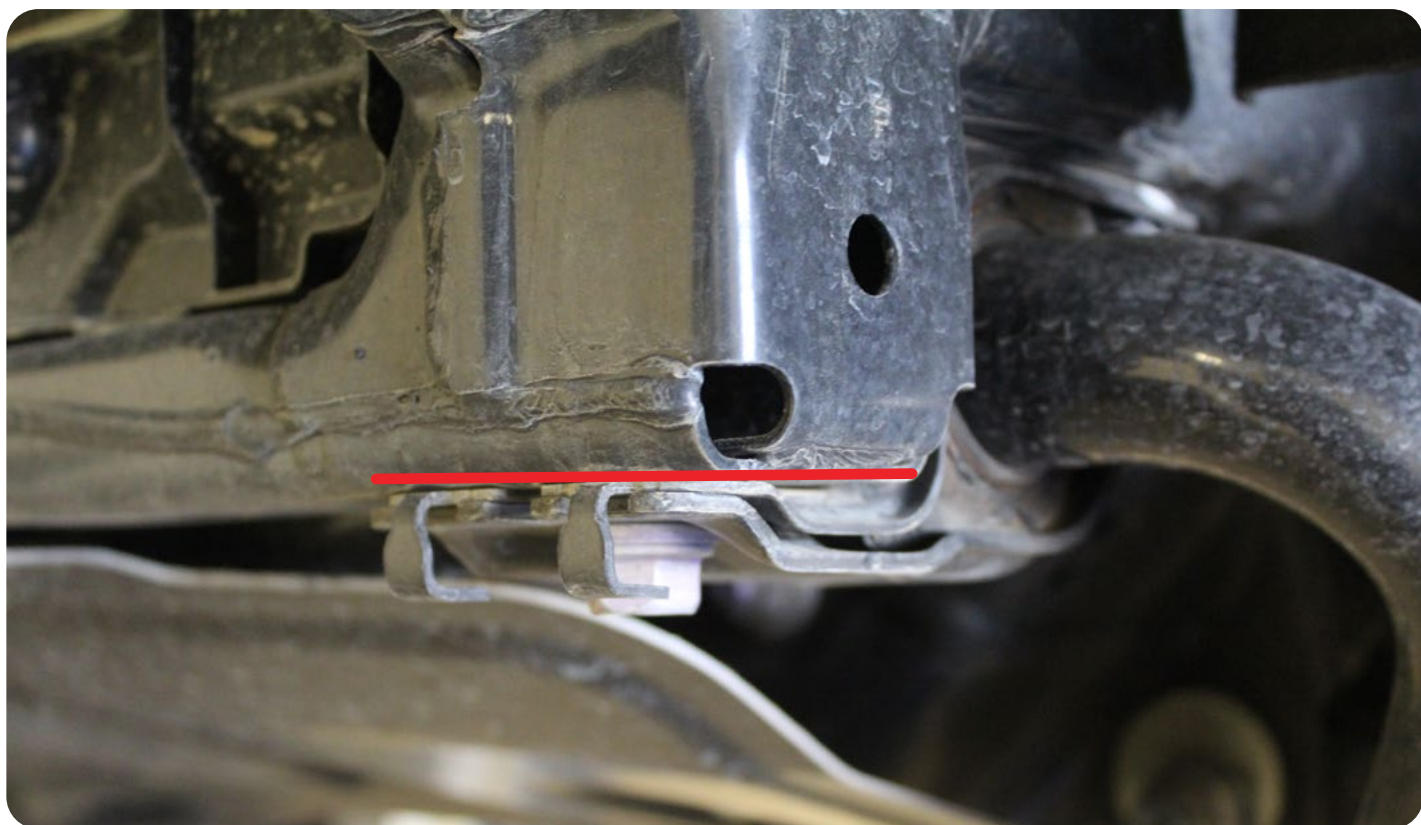



STEALTH WINCH KIT 2022-UP/TOYOTA TUNDRA

INSTALL

□ STEP 3

Next install the provided 3/8 bolts, nylon lock nuts, and washers on the middle hole by using a (9/16 socket and 9/16 wrench). Then install the provided 1/2" bolts, nylon lock nuts, and washers on the top hole and bottom using a (3/4 socket) and a (3/4 wrench). Return to center mount bumper install guide to finish.





INSTALLATION GUIDE

STEALTH WINCH KIT 2022-UP/TOYOTA TUNDRA

FINAL

□ STEP 4

Stand back and enjoy your new ADD Stealth Winch Kit.

Check and re-tighten all mounting bolts after 100 miles and periodically thereafter.



THIS PRODUCT IS PROTECTED BY ONE OR MORE U.S. PATENTS
WWW.ADDICTIVEDESERTDESIGNS.COM/PATENTS

FOR ADDITIONAL SUPPORT OR TECHNICAL QUESTIONS,
PLEASE CALL 480-671-0820 OR
EMAIL INFO@ADDICTIVEDESERTDESIGNS.COM