

Installation Instructions

Eibach Springs, Inc. • 264 Mariah Circle • Corona, California 92879-1751 • USA • Tech Support 800-222-8811 Ext 114

END LINK KIT # AK41-51-023-01-02

Kit Contents	Description	Part Number	Qty
	End Link	UEL20040302	2
	Instructions	AK41-51-023-01-02INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

Installation of Eibach Adjustable rear end links.

1. Begin by raising the vehicle and supporting it with the proper safety equipment, then, remove the front wheels. **Note: Never work on or under a vehicle that is not supported by the proper safety equipment.**



Photo 1

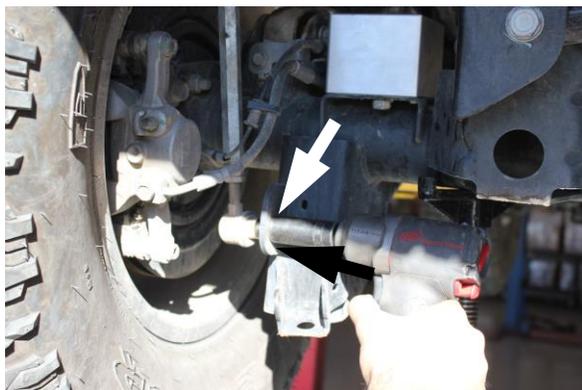


Photo 2

2. Loosen and remove the hardware that secures the OE end links to the bar and the axle mount, then, remove the end links. (See Photos 1 & 2)

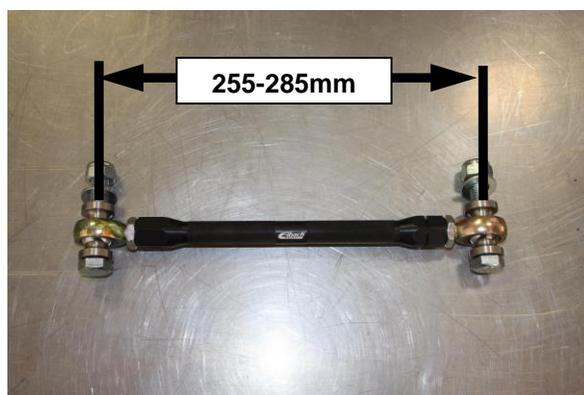


Photo 3

3. Adjust the Eibach end link to ensure full articulation of the bar. Length will depend on the amount of lift on the vehicle. **Note: The minimum to maximum allowable length for the end links is 255-285mm from center to center as shown. Do not adjust beyond 285mm. (See Photo 3)**



Photo 4



Photo 5

4. Install and secure the end link to the anti-roll bar as well as the axle mount using the provided hardware as shown. **(See Photos 4 & 5)**
5. With the hardware properly secured, tighten the jam nuts.
6. Repeat this procedure on the opposite side.
7. Double check to make sure everything is properly positioned and tightened, then, road test the vehicle.
8. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.