

Installation Instructions

Eibach Inc. 264 Mariah Circle Corona, CA 92879
USA Tech Support 800-507-2338 ext. 114



E40-27-011-01-01

Vehicle 09-10 Dodge Ram 1500
11-23 Ram 1500


Notes

Kit Contents	Description	Part Number	Quantity
	Rear Sway Bar	AS41-27-011-01-RA	1
	Sway Bar Bracket	UB0020	2
	Sway Bar Bushing	ES5340.01	2
	Zerk Fitting	H58041562	2
	Lubricant	AR.LUBRICANT	1


**Installation
Notes**

Read all instructions before beginning installation


- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported by safety stands and wheels are blocked.
- Never use impact wrenches or impact guns to install or remove shock absorber piston components, shafts and Piston rod nuts.
- All Eibach springs should be installed with the Eibach logo right-side-up.
- After Installation, inspect and adjust the following: Wheel Alignment; tire/wheel fender clearance when using aftermarket wheels or tires; brake line clearance and attachments; anti-lock-brake system sensors.

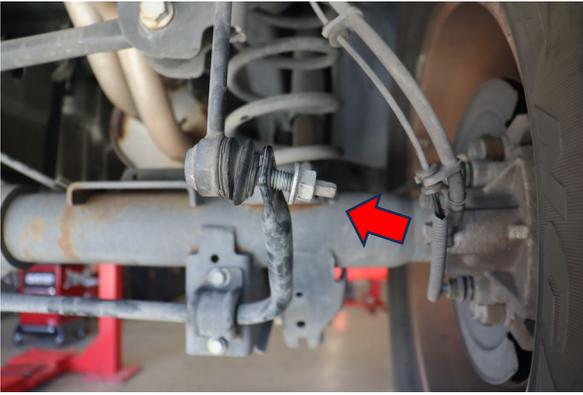


Loosen and remove OE rear end links from OE sway bar

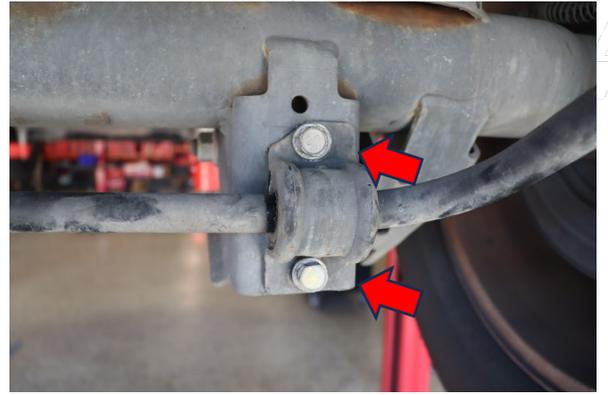

Loosen and remove OE sway bar brackets and remove sway bar.

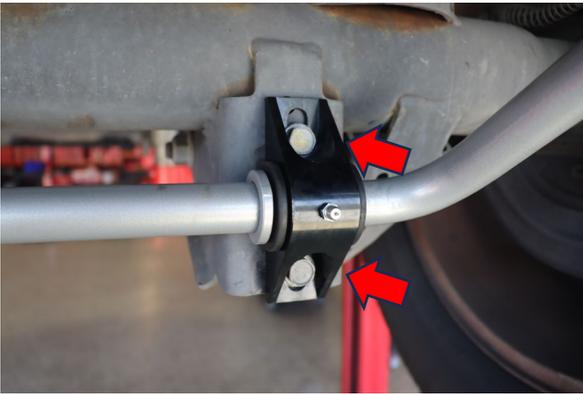

Install new bushings and brackets onto Eibach sway bar.

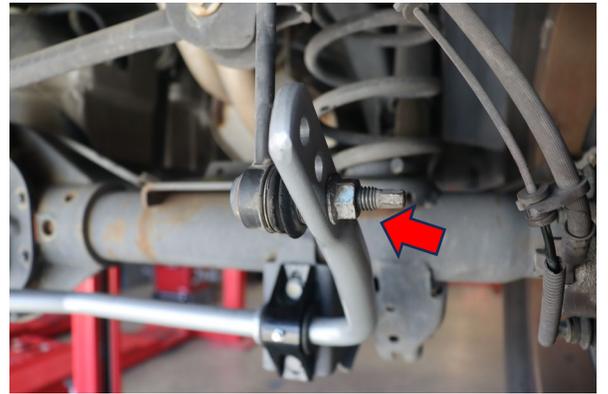


Attach factory end links to Eibach sway bar.

Be sure to lubricate inside of bushings before installation.



Double check to make sure everything is tight.

Road test the vehicle and recheck tightness on all bolts

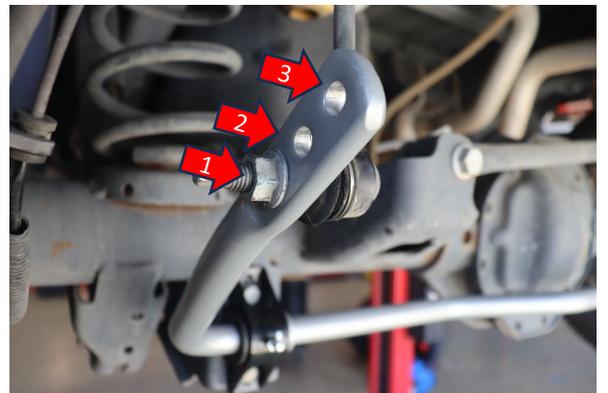

Setting 1: stiffest position

Setting 2: neutral position

Setting 3: softest position