

4-DR STEP SLIDERS

18+ JL WRANGLER

SRJL-08



TOOLS REQUIRED

- 10, 13mm Socket

SKILL LEVEL

- Novice/Intermediate
- 2 persons

Little skill level required, however, additional help is required for removal and installation of sliders.

TIME REQUIRED

- 1.5 Hour

Time to install this should only take about an hour and a half.

WARNINGS/CAUTIONS BEFORE STARTING INSTALLATION

Before you install this kit — Read and understand all instructions, warnings, cautions, and notes contained in this installation instruction guide. Consult your vehicle owner's manual for proper disconnection of electrical and lifting of vehicle if required for installation of this product.

This install may require some technical skills and knowledge of basic mechanical work. If you do not feel that you are capable of performing this install please take this product to a trained professional.

After reading this guide please contact us with any questions or concerns before installing product.
Customer Service: 855-680-9595

DV8 Offroad is not responsible for any bodily injury or harm to you or your vehicle as a result of an improper install.

Proper installation of this kit required knowledge of the factory recommended procedures for removal and installation of original equipment components. We recommend that the factory shop manual and any special tools needed to service your vehicle be on hand during the installation. Installation of this kit without proper knowledge of the factory recommended procedures may affect the performance of these components and the safety of the vehicle

- Always wear eye protection when operating power tools

Inspect all contents of this package to make sure product is not damaged and all installation hardware has been included. If parts are missing from kit, please be prepared to provide the following information

1. Name of purchase location
2. Bar Code on side of box
3. Date above bar code
4. Date inside box cover



INSTALLATION MANUAL

STEP 1 | If you have factory steps or sliders, they will need to be removed prior to install.

Use a 10mm socket to remove the factory nuts securing the slider to the body/pinch weld.

Then, while a friend supports the slider, remove the remaining factory hardware using a 13mm socket.

Remove the slider and set it off to the side. Repeat steps for opposite side of the vehicle.

Note: Assistance is recommended to prevent injury and damage to the product or vehicle.



INSTALLATION MANUAL

Begin by unpacking all items and inspecting for missing pieces or damage. If you have any concerns, please contact the company the product was purchased from. Extra hardware may be included with the product.


HARDWARE INCLUDED

- | | |
|-----------------------|----------------------|
| (6) M8x25 Hex | (4) M6 Spring Washer |
| (8) M8 Nuts | (4) M6 Nut |
| (14) M8 Flat Washer | |
| (14) M8 Spring Washer | |
| (4) M6 Flat Washer | |

STEP 2 | The size of the mounting holes on the vehicle can vary based on the year and trim.

With assistance, lift the steps to the vehicle and gently attempt to install them by pressing them into the mounting holes. Check that the holes are large enough to accept the studs on the steps.

If they are not large enough, drill them out as necessary. We recommend a 27/64" drill bit.

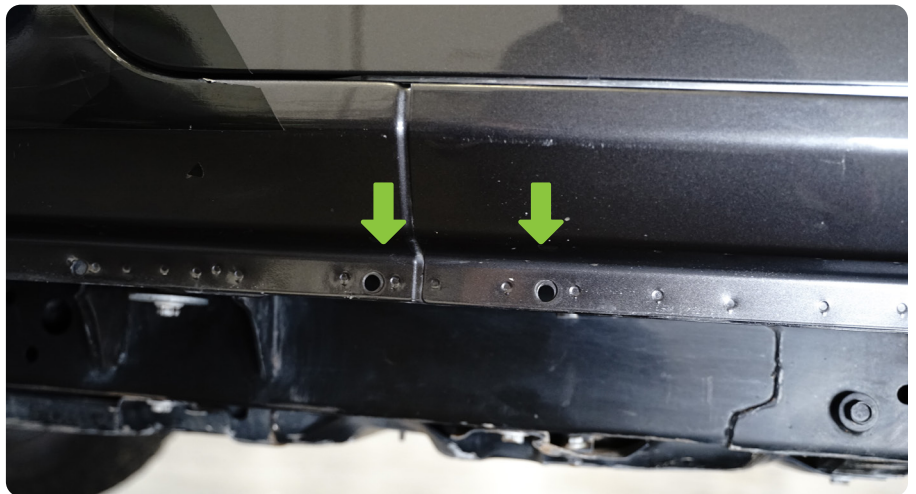

INSTALLATION MANUAL

STEP 3 | With assistance, install the steps onto the vehicle and loosely thread on the provided M8 Nuts on center and rear mounts.

Use (1) M8 flat washer and (1) Split washer per M8 stud.

Note: Assistance is recommended to prevent injury and damage to the product or vehicle.



STEP 4 | Loosely Install the provided M8 bolts on all three mounts.

Only thread the bolts in to the first few threads.

Once all M8 bolts are loosely installed, press the steps up slightly so that the studs angled brackets sits flush against the pinch welds. Snug-up the M8 nuts using a 13mm socket and hand tools until the M6 studs fully protrude through the pinch weld.



STEP 5 | Thread the provided M6 nuts onto the M6 studs on the front mount. Use (1) M6 flat washer and (1) M6 split washer per M6 stud.

Once all hardware is loosely installed, secure the hardware on the studs using a 10mm and 13mm socket.




INSTALLATION MANUAL

STEP 6 | Finish securing the remaining M8 bolts using a 13mm socket.

Repeat steps for the opposite side of the vehicle.

Double check fitment and all hardware is secure.

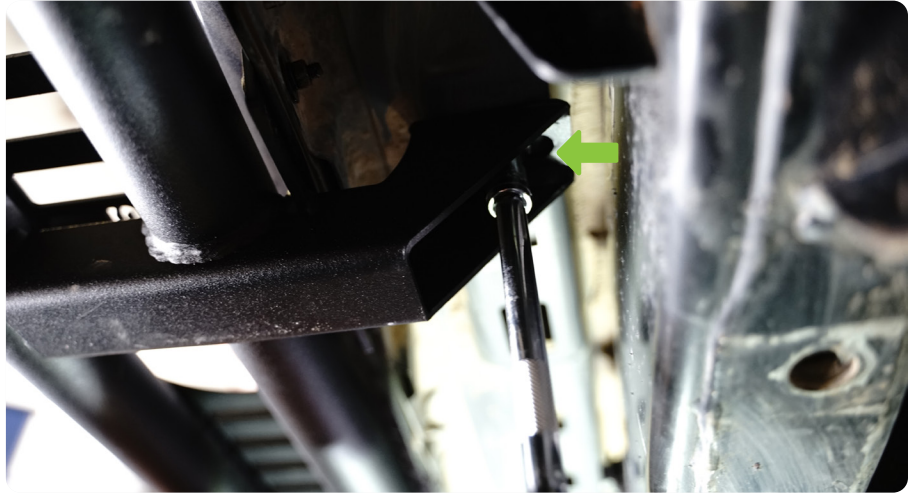

STEP 7 | Congrats! You are finished with the install of the 18+ JL Wrangler Step Sliders!

