



Installation Guide for 2022-24 Toyota Tundra LED Tail Lights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX TAIL LIGHTS** for your 2022-24 Toyota Tundra

DO NOT USE DIELECTRIC GREASE!



Table of Contents

PART I REMOVE INNER TAIL LIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Remove the tail lights

PART II TAIL LIGHTS INSTALLATION


- **STEP 1.** Transfer the tailgate bump switch
- **STEP 2.** Install the tail light assembly clips
- **STEP 3.** Install tail lights
- **STEP 4.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE INNER TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper

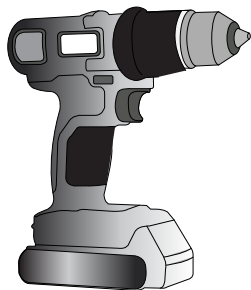

Power Tool



Plastic
Panel
Popper



1/4 Ratchet



1/4 Extension

10mm




Socket

STEP 1. REMOVE THE TAIL LIGHTS

When working on your vehicle, always ensure it is turned off and securely parked.

Begin by opening the trunk or tailgate, and then remove the two 10mm bolts that secure each tail light.




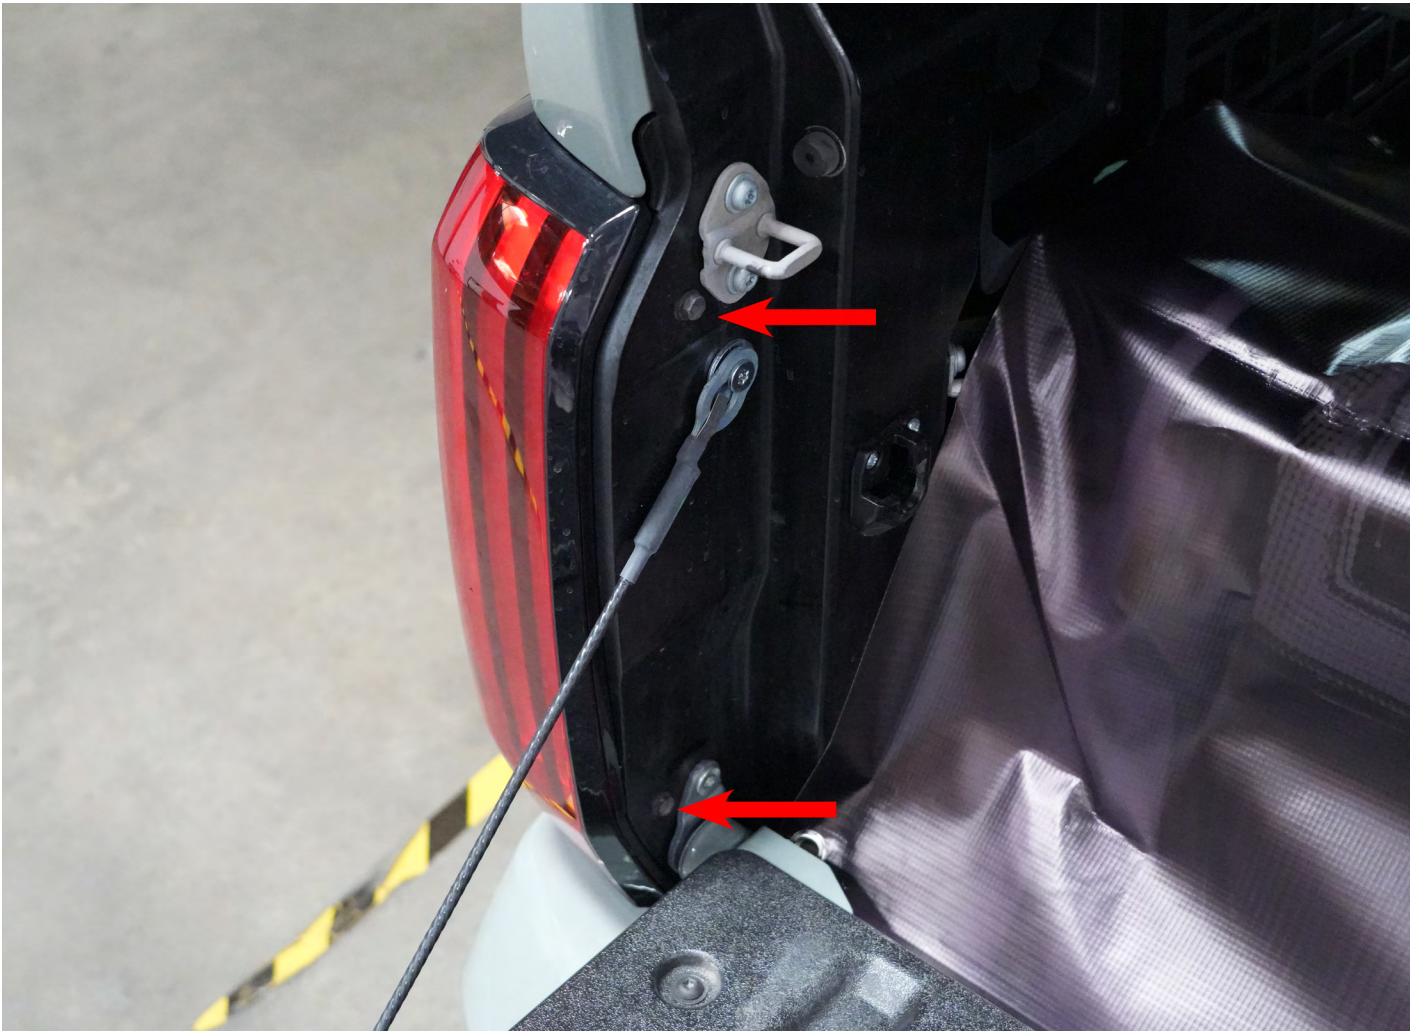


Carefully pull the tail light assembly outward to remove it from the mounting.



Unplug the tail light connector and the tailgate release connector to completely remove the tail light. Repeat these steps for the other side.

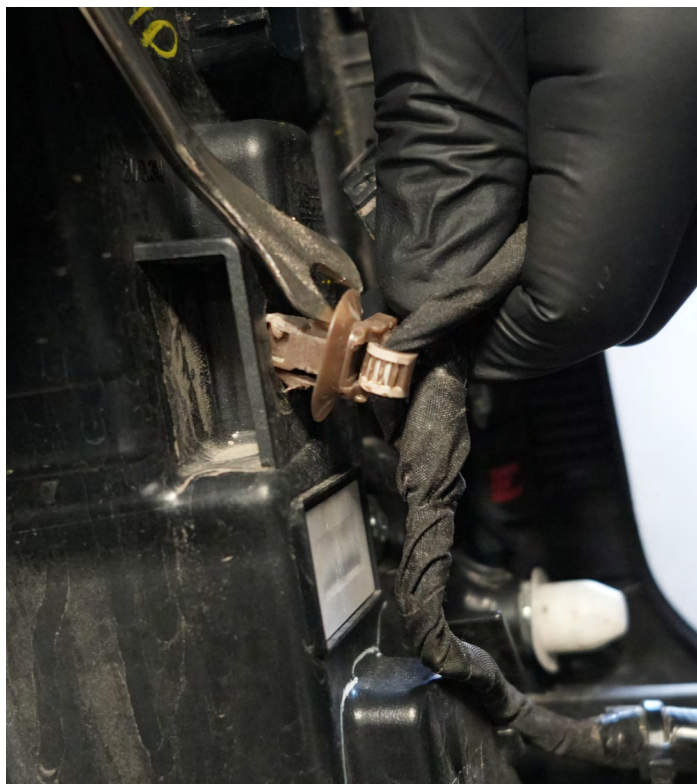

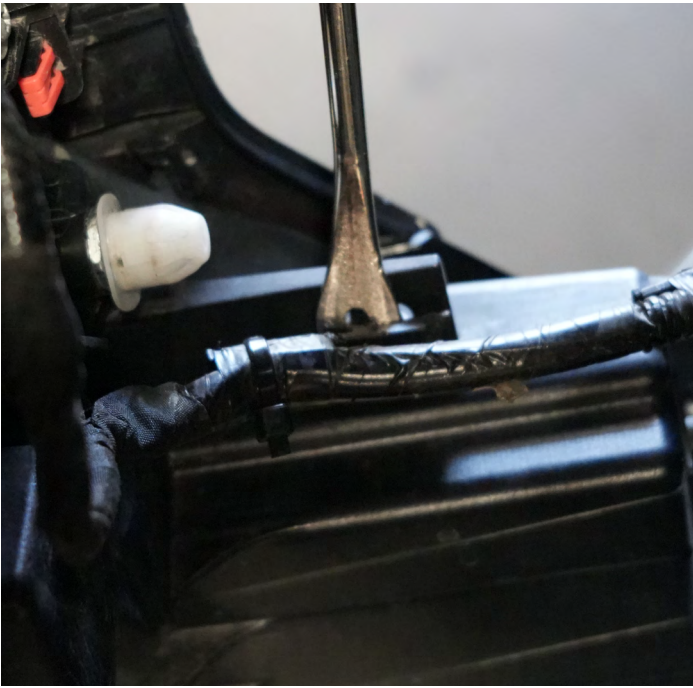


PART II TAIL LIGHTS INSTALLATION

STEP 1. TRANSFER THE TAILGATE BUMP SWITCH

Before installing the new ALPHAREX tail lights, it is important to transfer the OEM tailgate bump switch to the new tail light assembly.

Depending on your model, the tailgate bump switch is usually located on the driver's side. Therefore, you would only need to transfer the driver's side assembly in this case.

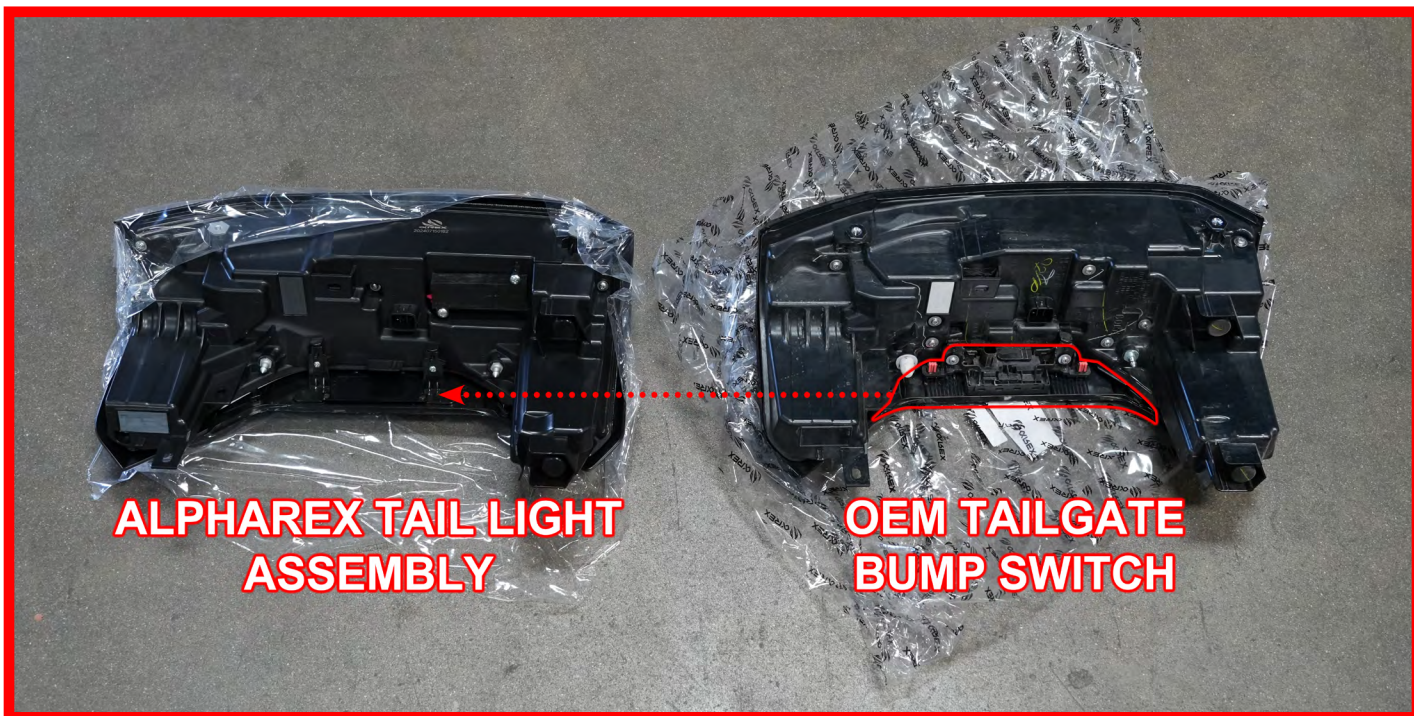

First, unscrew the two screws that secure the tailgate bump switch from the OE tail light assembly.




Then, remove the tailgate bump switch and install it onto the new ALPHAREX tail light assembly.



Unscrew the two screws from the new ALPHAREX tail light assembly to remove the cover, and then install the OE tailgate bump switch.



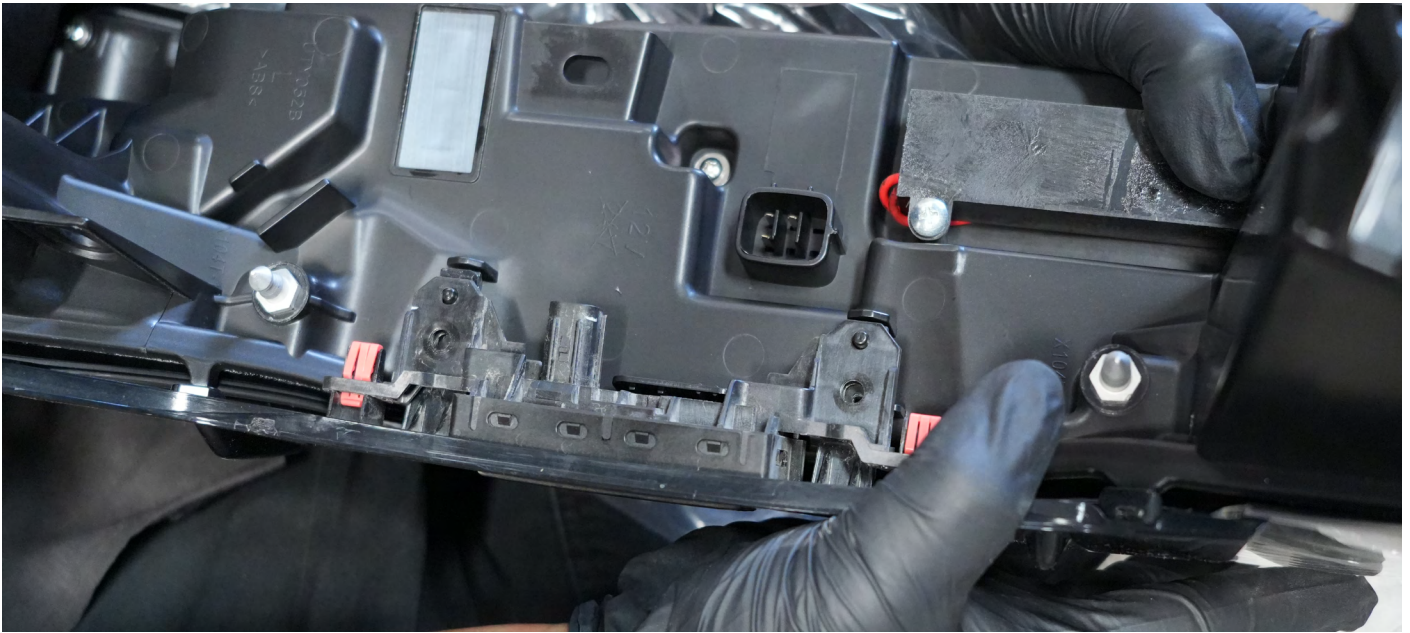


STEP 2. INSTALL THE TAIL LIGHT ASSEMBLY CLIPS

When removing the factory tail light assembly from the vehicle, the mounting clips often become damaged or remain attached to the tail light assembly. Therefore, it's important to install a new set of clips on the new ALPHAREX tail light assembly to ensure a proper fit into the vehicle.

From the package, you should find the included sets of tail light assembly clips for mounting. Use one set of clips for each tail light assembly during installation.

MALE: install to the lower ALPHAREX tail light assembly.

FEMALE: install into the lower mount hole on the vehicle.

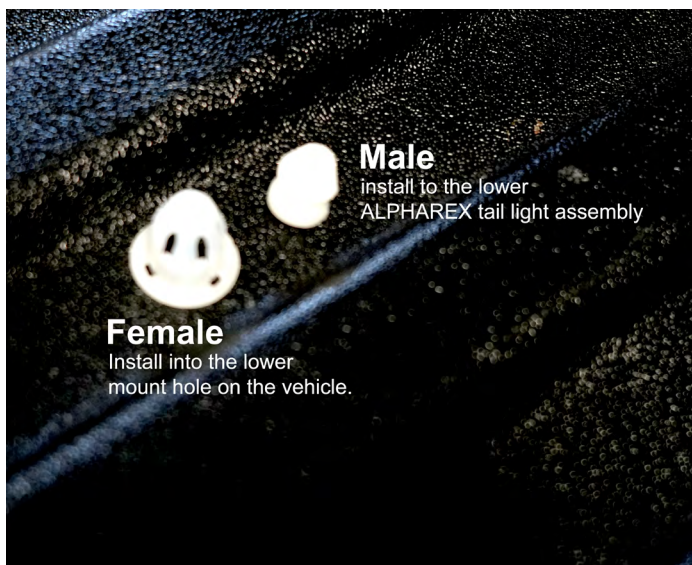

STEP 3. INSTALL TAIL LIGHTS

Start by connecting the tail light connector and the trunk release connector to the tail light assembly. **DO NOT USE DIELECTRIC GREASE!**



Install the new ALPHAREX tail light into the vehicle, making sure to align the mounting clips and push it in to secure it properly.



Secure the tail light with the two 10mm bolts to complete the installation. Follow the same steps for the other side of the tail light.



STEP 4. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX 22-24 Toyota Tundra LED Tail Lights.

